

YHTEENSOPIVUUSLISTA AKUT

DIGITAALIKAMEROILLE 25.11.2011



ED-MARK Oy
Vilhonvuorenska
00500 HELSINKI

Puh: 09-682 2420

Faksi: 09-09-682 2804

www.ed-mark.fi

Merkki	Malli	Teho	Tyyppi	T2.	T.3	BRAUN-T.nro
Agfaphoto	DC-533	AA	NiMH			59287
Agfaphoto	DC-530i	AA	NiMH			59287
Agfaphoto	DC-500	AA	NiMH			59287
Agfaphoto	DC-630	AA	NiMH			59287
Agfaphoto	DC-630i	AA	NiMH			59287
Agfaphoto	DC-630xs	AA	NiMH			59287
Agfaphoto	DC-630x	AA	NiMH			59287
Agfaphoto	DC-633xs	AA	NiMH			59287
Agfaphoto	DC-730i	AA	NiMH			59287
Agfaphoto	DC-735	3,7V/750mAh	BDP-FNP40		B10	59209
Agfaphoto	DC-830	AA	NiMH			59287
Agfaphoto	DC-1030i	AA	NiMH			59287
Agfaphoto	DC-8330i	AA	NiMH			59287
Benq	DC-2300	AA	NiMH			59287
Benq	DC-2410	AA	NiMH			59287
Benq	DC-4500	AA	NiMH			59287
Benq	DC-C40	AA	NiMH			59287
Benq	DC-C50	3,7V/1100mAh	BDP-FNP60		B12	59211
Benq	DC-C500	3,7V/720mAh	BDP-MNP900		B104	59314
Benq	DC-C530	AA	NiMH			59287
Benq	DC-C540	AA	NiMH			59287
Benq	DC-C610	AA	NiMH			59287
Benq	DC-C630	AA	NiMH			59287
Benq	DC-C640	AA	NiMH			59287
Benq	DC-C740	AA	NiMH			59287
Benq	DC-C741i	AA	NiMH			59287
Benq	DC-C750	AA	NiMH			59287
Benq	DC-C840	AA	NiMH			59287
Benq	DC-C850	AA	NiMH			59287
Benq	DC-E43	3,7V/720mAh	BDP-MNP900		B104	59314
Benq	DC-E53	3,7V/720mAh	BDP-MNP900		B104	59314
Benq	DC-E310	AA	NiMH			59287
Benq	DC-E510	3,7V/1100mAh	BDP-CNP40		B53	59251
Benq	DC-E520	3,7V/1100mAh	BDP-CNP40		B53	59251
Benq	DC-E600	3,7V/1100mAh	BDP-CNP40		B53	59251
Benq	DC-E610	3,7V/1100mAh	BDP-CNP40		B53	59251
Benq	DC-E720	3,7V/720mAh	BDP-MNP900		B104	59314

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



Benq	DC-E800	3,7V/750mAh	BDP-FNP40	B10	59209
Benq	DC-E820	3,7V/650mAh	BDP-CNP20	B9	59208
Benq	DC-P860	AA	NiMH		59287
Benq	DC-P500	3,7V/1100mAh	BDP-CNP40	B53	59251
Benq	DC-T700	3,7V/650mAh	BDP-CNP20	B9	59208
Benq	DC-T800	3,7V/650mAh	BDP-CNP20	B9	59208
Benq	DC-X600	3,7V/750mAh	BDP-FNP40	B10	59209
Benq	DC X720	3,7V/650mAh	BDP-CNP20	B9	59208
Benq	DC-X725	3,7V/650mAh	BDP-CNP20	B9	59208
BRAUN	D570	AA	NiMH		59287
BRAUN	D590	AA	NiMH		59287
BRAUN	D670	AA	NiMH		59287
BRAUN	D700	AA	NiMH		59287
BRAUN	DC72	AA	NiMH		59287
BRAUN	DC84	AA	NiMH		59287
BRAUN	DC101	AA	NiMH		59287
BRAUN	D800	AA	NiMH		59287
BRAUN	D75i	3,7V/750mAh	BDP-FNP40	B10	59209
BRAUN	DS83	3,7V/750mAh	BDP-FNP40	B10	59209
BRAUN	DS101	3,7V/750mAh	BDP-FNP40	B10	59209
BRAUN	D808	3,7V/750mAh	BDP-FNP40	B10	59209
BRAUN	D830	3,7V/750mAh	BDP-FNP40	B10	59209
BRAUN	D905	AA	NiMH		59287
Canon	EOS 1D Mark III	11,1V/2400mAh	BDP-CLPE4	B158	59365
Canon	EOS 1D Mark IV	11,1V/2400mAh	BDP-CLPE4	B158	59365
Canon	EOS 1DS Mark III	11,1V/2400mAh	BDP-CLPE4	B158	59365
Canon	EOS 1DX	11,1V/2400mAh	BDP-CLPE4	B158	59365
Canon	EOS 5D	7,4V/1620mAh	BDP-BP511	B2	59201
Canon	EOS 5D Mark II	7,4V/1500mAh	BDP-CLPE6	B155	59363
Canon	EOS 7D	7,4V/1500mAh	BDP-CLPE6	B155	59363
Canon	EOS D10	7,4V/1620mAh	BDP-BP511	B2	59201
Canon	EOS D30	7,4V/1620mAh	BDP-BP511	B2	59201
Canon	EOS D60	7,4V/1620mAh	BDP-BP511	B2	59201
Canon	EOS 20D	7,4V/1620mAh	BDP-BP511	B2	59201
Canon	EOS 20DA	7,4V/1620mAh	BDP-BP511	B2	59201
Canon	EOS 30D	7,4V/1620mAh	BDP-BP511	B2	59201
Canon	EOS 40D	7,4V/1620mAh	BDP-BP511	B2	59201
Canon	EOS 50D	7,4V/1620mAh	BDP-BP511	B2	59201
Canon	EOS 50D	7,4V/2000mAh	BDP-CBP512	B154	59362
Canon	EOS 60D	7,4V/1500mAh	BDP-CLPE6	B155	59363
Canon	EOS 300D	7,4V/1620mAh	BDP-BP511	B2	59201
Canon	EOS 350D	7,4V/750mAh	BDP-NB2LH	B4	59203

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Canon	EOS 400D	7,4V/750mAh	BDP-NB2LH	B4	59203
Canon	EOS 450D	7,4V/1100mAh	BDP-CLP-E5	B103	59313
Canon	EOS 500D	7,4V/1100mAh	BDP-CLP-E5	B103	59313
Canon	EOS 550D	7,4V/750mAh	BD-CLP-E8	B173	59381
Canon	EOS 600D		not available		
Canon	EOS 1000D	7,4V/1100mAh	BDP-CLP-E5	B103	59313
Canon	EOS 1100D	7,4V/800mAh	BDP-CLPE10	B193	59432
Canon	EOS Kiss X50	7,4V/800mAh	BDP-CLPE10	B193	59432
Canon	EOS Rebel T3	7,4V/800mAh	BDP-CLPE10	B193	59432
Canon	IXY Digital 25IS	3,7V/1000mAh	BDP-CNB-6L	B135	59343
Canon	IXUS 30	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS 40	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS 50	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS 55	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS 60	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS 65	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS 70	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS 75	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS 80IS	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS 85IS	3,7V/1000mAh	BDP-CNB-6L	B135	59343
Canon	IXUS 90IS	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS 95IS	3,7V/1000mAh	BDP-CNB-6L	B135	59343
Canon	IXUS 100IS	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS 105	3,7V/1000mAh	BDP-CNB-6L	B135	59343
Canon	IXUS 110IS	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS 115 HS	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS 120SI	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS 130	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS 200IS	3,7V/1000mAh	BDP-CNB-6L	B135	59343
Canon	IXUS 210	3,7V/1000mAh	BDP-CNB-6L	B135	59343
Canon	IXUS 220 HS	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS 230 HS	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS 300	3,7V/1000mAh	BDP-NB1LH	B3	59202
Canon	IXUS 300 HS	3,7V/1000mAh	BDP-CNB-6L	B135	59343
Canon	IXUS 310 HS	3,7V/1000mAh	BDP-CNB-6L	B135	59343
Canon	IXUS 330	3,7V/1000mAh	BDP-NB1LH	B3	59202
Canon	IXUS 400	3,7V/1000mAh	BDP-NB1LH	B3	59202
Canon	IXUS 430	3,7V/1000mAh	BDP-NB1LH	B3	59202
Canon	IXUS 500	3,7V/1000mAh	BDP-NB1LH	B3	59202
Canon	IXUS 700	3,7V/790mAh	BDP-NB3L	B5	59204
Canon	IXUS 750	3,7V/790mAh	BDP-NB3L	B5	59204
Canon	IXUS 800IS	3,7V/1120mAh	BDP-NB5L	B7	59206

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE

Canon	IXUS 850IS	3,7V/1120mAh	BDP-NB5L	B7	59206
Canon	IXUS 860IS	3,7V/1120mAh	BDP-NB5L	B7	59206
Canon	IXUS 870IS	3,7V/1120mAh	BDP-NB5L	B7	59206
Canon	IXUS 900TI	3,7V/1120mAh	BDP-NB5L	B7	59206
Canon	IXUS 950 IS	3,7V/1120mAh	BDP-NB5L	B7	59206
Canon	IXUS 960IS	3,7V/1120mAh	BDP-NB5L	B7	59206
Canon	IXUS 970IS	3,7V/1120mAh	BDP-NB5L	B7	59206
Canon	IXUS 980IS	3,7V/1120mAh	BDP-NB5L	B7	59206
Canon	IXUS 990IS	3,7V/1120mAh	BDP-NB5L	B7	59206
Canon	IXUS 1000HS	3,7V/870mAh	BDP-NB9L	B175	59383
Canon	IXUS 1100HS	3,7V/870mAh	BDP-NB9L	B175	59383
Canon	IXUS i	3,7V/790mAh	BDP-NB3L	B5	59204
Canon	IXUS i zoom	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS i5	3,7V/790mAh	BDP-NB3L	B5	59204
Canon	IXUS i7	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS i7 zoom	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS WIRELESS	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS TX1	3,7V/720mAh	BDP-NB4L	B6	59205
Canon	IXUS V	3,7V/1000mAh	BDP-NB1LH	B3	59202
Canon	IXUS V2 ²	3,7V/1000mAh	BDP-NB1LH	B3	59202
Canon	IXUS V ³	3,7V/1000mAh	BDP-NB1LH	B3	59202
Canon	IXUS II	3,7V/790mAh	BDP-NB3L	B5	59204
Canon	IXUS Iis	3,7V/790mAh	BDP-NB3L	B5	59204
Canon	Powershot A 70	AA	NiMH		59287
Canon	Powershot A 75	AA	NiMH		59287
Canon	Powershot A 80	AA	NiMH		59287
Canon	Powershot A 85	AA	NiMH		59287
Canon	Powershot A 95	AA	NiMH		59287
Canon	Powershot A 410	AA	NiMH		59287
Canon	PowerShot A420	AA	NiMH		59287
Canon	PowerShot A430	AA	NiMH		59287
Canon	PowerShot A450	AA	NiMH		59287
Canon	PowerShot A460	AA	NiMH		59287
Canon	PowerShot A470	AA	NiMH		59287
Canon	PowerShot A480	AA	NiMH		59287
Canon	PowerShot A490	AA	NiMH		59287
Canon	PowerShot A495	AA	NiMH		59287
Canon	PowerShot A510	AA	NiMH		59287
Canon	PowerShot A520	AA	NiMH		59287
Canon	PowerShot A530	AA	NiMH		59287
Canon	PowerShot A540	AA	NiMH		59287
Canon	PowerShot A550	AA	NiMH		59287

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE

Canon	PowerShot A560	AA	NiMH		59287
Canon	PowerShot A570 IS	AA	NiMH		59287
Canon	PowerShot A580	AA	NiMH		59287
Canon	PowerShot A 590IS	AA	NiMH		59287
Canon	PowerShot A610	AA	NiMH		59287
Canon	PowerShot A620	AA	NiMH		59287
Canon	PowerShot A630	AA	NiMH		59287
Canon	PowerShot A640	AA	NiMH		59287
Canon	PowerShot A650IS	AA	NiMH		59287
Canon	PowerShot A700	AA	NiMH		59287
Canon	PowerShot A710 IS	AA	NiMH		59287
Canon	PowerShot A720 IS	AA	NiMH		59287
Canon	PowerShot A800	AA	NiMH		59287
Canon	PowerShot A1000IS	AA	NiMH		59287
Canon	PowerShot A1100IS	AA	NiMH		59287
Canon	PowerShot A1200	AA	NiMH		59287
Canon	PowerShot A2000IS	AA	NiMH		59287
Canon	PowerShot A2010IS	3,7V/1000mAh	BDP-CNB-6L	B135	59343
Canon	PowerShot A2100IS	AA	NiMH		59287
Canon	PowerShot A2200	3,7V/700 mAh	BDP-CNB8L	B174	59382
Canon	PowerShot A3000IS	3,7V/700 mAh	BDP-CNB8L	B174	59382
Canon	PowerShot A3100IS	3,7V/700 mAh	BDP-CNB8L	B174	59382
Canon	PowerShot A3200IS	3,7V/700 mAh	BDP-CNB8L	B174	59382
Canon	PowerShot A3300IS	3,7V/700 mAh	BDP-CNB8L	B174	59382
Canon	PowerShot D 10	3,7V/1000mAh	BDP-CNB-6L	B135	59343
Canon	PowerShot E1	AA	NiMH		59287
Canon	Powershot G1	7,4V/1620mAh	BDP-BP511	B2	59201
Canon	Powershot G2	7,4V/1620mAh	BDP-BP511	B2	59201
Canon	Powershot G3	7,4V/1620mAh	BDP-BP511	B2	59201
Canon	Powershot G5	7,4V/1620mAh	BDP-BP511	B2	59201
Canon	Powershot G6	7,4V/750mAh	BDP-NB2LH	B4	59203
Canon	Powershot G7	7,4V/750mAh	BDP-NB2LH	B4	59203
Canon	Powershot G9	7,4V/750mAh	BDP-NB2LH	B4	59203
Canon	Powershot G10	7,4V/850mAh	BDP-CNB7L	B143	59351
Canon	Powershot G10IS	7,4V/850mAh	BDP-CNB7L	B143	59351
Canon	Powershot G11	7,4V/850mAh	BDP-CNB7L	B143	59351
Canon	Powershot G12	7,4V/850mAh	BDP-CNB7L	B143	59351
Canon	Powershot Pro 1	7,4V/1620mAh	BDP-BP511	B2	59201
Canon	Powershot Pro 70	7,4V/1620mAh	BDP-BP511	B2	59201
Canon	Powershot Pro 90	7,4V/1620mAh	BDP-BP511	B2	59201
Canon	PowerShot S2 IS	AA	NiMH		59287
Canon	PowerShot S3 IS	AA	NiMH		59287

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE

Canon	Powershot S30	7,4V/750mAh	BDP-NB2LH	B4	59203
Canon	Powershot S40	7,4V/750mAh	BDP-NB2LH	B4	59203
Canon	Powershot S45	7,4V/750mAh	BDP-NB2LH	B4	59203
Canon	Powershot S50	7,4V/750mAh	BDP-NB2LH	B4	59203
Canon	Powershot S60	7,4V/750mAh	BDP-NB2LH	B4	59203
Canon	Powershot S70	7,4V/750mAh	BDP-NB2LH	B4	59203
Canon	Powershot S80	7,4V/750mAh	BDP-NB2LH	B4	59203
Canon	Powershot S90	3,7V/1000mAh	BDP-CNB-6L	B135	59343
Canon	Powershot S95	3,7V/1000mAh	BDP-CNB-6L	B135	59343
Canon	Powershot S100	3,7V/1120mAh	BDP-NB5L	B7	59206
Canon	Powershot SD770is	AA	NiMH		59287
Canon	PowerShot SX1IS	AA	NiMH		59287
Canon	PowerShot SX10IS	AA	NiMH		59287
Canon	PowerShot SX20IS	AA	NiMH		59287
Canon	PowerShot SX 30 IS	7,4V/850mAh	BDP-CNB7L	B143	59351
Canon	PowerShot SX 40HS		not available		
Canon	PowerShot SX100IS	AA	NiMH		59287
Canon	PowerShot SX110IS	AA	NiMH		59287
Canon	PowerShot SX120IS	AA	NiMH		59287
Canon	PowerShot SX130IS	AA	NiMH		59287
Canon	PowerShot SX150	AA	NiMH		59287
Canon	PowerShot SX200IS	3,7V/1120mAh	BDP-NB5L	B7	59206
Canon	PowerShot SX210IS	3,7V/1120mAh	BDP-NB5L	B7	59206
Canon	PowerShot SX220HS	3,7V/1120mAh	BDP-NB5L	B7	59206
Canon	PowerShot TX1	3,7V/720mAh	BDP-NB4L	B6	59205
Casio	Exilim Pro EX-F 1	7,4V/1950mAh	BDP-CNP100	B126	59336
Casio	Exilim Pro EX -FH25	AA	NiMH		59287
Casio	Exilim E-FH100	3,7V/1700mAh	BDP-CNP90	B164	59372
Casio	Exilim EX-M2	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-P505	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim Hi-Zoom EX-V7S	3,7V/950mAh	BDP-CNP50	B11	59210
Casio	Exilim Hi-Zoom EX-V7B	3,7V/950mAh	BDP-CNP50	B11	59210
Casio	Exilim Pro EX-P505	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim Pro EX-P600	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-FC100	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-FS10	3,7V/720mAh	BDP-CNP60	B101	59311
Casio	Exilim EX-S	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-S2	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-S3	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-S10	3,7V/720mAh	BDP-CNP60	B101	59311
Casio	Exilim EX-S12	3,7V/720mAh	BDP-CNP60	B101	59311
Casio	Exilim EX-S20	3,7V/650mAh	BDP-CNP20	B9	59208

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Casio	Exilim EX-S100	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-S200	3,7V/550mAh	BDP-CNP120	B194	59433
Casio	Exilim EX-S500Silver	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-S500 Orange	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-S500Grey	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-G1	3,7V/600mAh	BDP-CNP80	B156	59364
Casio	Exilim EX-H10	3,7V/1700mAh	BDP-CNP90	B164	59372
Casio	Exilim EX-H5	3,7V/600mAh	BDP-CNP80	B156	59364
Casio	Exilim EX-H15	3,7V/1700mAh	BDP-CNP90	B164	59372
Casio	Exilim EX-H20G	3,7V/1700mAh	BDP-CNP90	B164	59372
Casio	Exilim EX-H30	3,7V/1100mAh	BDP-CNP130	B186	59395
Casio	Exilim EX-S600 Sparkle	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-S600 Mistral	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-S600 Orange	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-S600D	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-S770	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-S770D	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-S880	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-TR100		not available		
Casio	Exilim EX-V7	3,7V/950mAh	BDP-CNP50	B11	59210
Casio	Exilim EX-V8	3,7V/950mAh	BDP-CNP50	B11	59210
Casio	Exilim EX-Z1	3,7V/600mAh	BDP-CNP80	B156	59364
Casio	Exilim EX-Z2	3,7V/600mAh	BDP-CNP80	B156	59364
Casio	Exilim EX-Z3	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-Z4	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-Z5	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-Z6	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-Z7	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-Z8	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-Z10	AA	NiMH		59287
Casio	Exilim EX-Z11	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-Z12	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-Z20	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-Z21	3,7V/720mAh	BDP-CNP60	B101	59311
Casio	Exilim EX-Z25	3,7V/720mAh	BDP-CNP60	B101	59311
Casio	Exilim EX-Z30	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z40	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z50	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z55	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z57	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-Z60	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-Z65	3,7V/650mAh	BDP-CNP20	B9	59208

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Casio	Exilim EX-Z70	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-Z75	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-Z77	3,7V/650mAh	BDP-CNP20	B9	59208
Casio	Exilim EX-Z80	3,7V/720mAh	BDP-CNP60	B101	59311
Casio	Exilim EX-Z85	3,7V/720mAh	BDP-CNP60	B101	59311
Casio	Exilim EX-Z90	3,7V/720mAh	BDP-CNP60	B101	59311
Casio	Exilim EX-Z100	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z110	AA	NiMH		59287
Casio	Exilim EX-Z120	AA	NiMH		59287
Casio	Exilim EX-Z150	3,7V/1050mAh	BDP-CNP70	B144	59352
Casio	Exilim EX-Z200	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z250	3,7V/1050mAh	BDP-CNP70	B144	59352
Casio	Exilim EX-Z250BE	3,7V/1050mAh	BDP-CNP70	B144	59352
Casio	Exilim EX-Z250GD	3,7V/1050mAh	BDP-CNP70	B144	59352
Casio	Exilim EX-Z250PK	3,7V/1050mAh	BDP-CNP70	B144	59352
Casio	Exilim EX-Z250RD	3,7V/1050mAh	BDP-CNP70	B144	59352
Casio	Exilim EX-Z250SR	3,7V/1050mAh	BDP-CNP70	B144	59352
Casio	Exilim EX-Z270	3,7V/600mAh	BDP-CNP80	B156	59364
Casio	Exilim EX-Z280	3,7V/600mAh	BDP-CNP80	B156	59364
Casio	Exilim EX-Z300	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z330	3,7V/600mAh	BDP-CNP80	B156	59364
Casio	Exilim EX-Z350	3,7V/600mAh	BDP-CNP80	B156	59364
Casio	Exilim EX-Z400	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z450	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z500	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z550	3,7V/600mAh	BDP-CNP80	B156	59364
Casio	Exilim EX-Z600	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z700	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z750	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z800	3,7V/600mAh	BDP-CNP80	B156	59364
Casio	Exilim EX-Z850	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z1000	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z1050	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z1080	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z1200	3,7V/1100mAh	BDP-CNP40	B53	59251
Casio	Exilim EX-Z2000	3,7V/800mAh	BDP-CNP110	B172	59380
Casio	Exilim EX-Z2300	3,7V/800mAh	BDP-CNP110	B172	59380
Casio	Exilim EX-ZR10	3,7V/800mAh	BDP-CNP110	B172	59380
Casio	Exilim EX-ZR15	3,7V/800mAh	BDP-CNP110	B172	59380
Casio	Exilim EX-ZR100	3,7V/1100mAh	BDP-CNP130	B186	59395
Casio	Exilim EX-ZS5	3,7V/600mAh	BDP-CNP80	B156	59364
Casio	Exilim EX-ZS10	3,7V/550mAh	BDP-CNP120	B194	59433

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



Casio	Exilim EX-ZS15	3,7V/550mAh	BDP-CNP120	B194	59433
Casio	Exilim EX-ZS100	3,7V/600mAh	BDP-CNP80	B156	59364
Casio	Exilim QV-R3	3,7V/720mAh	BDP-CNP60	B101	59311
Casio	Exilim QV-R4	3,7V/720mAh	BDP-CNP60	B101	59311
Casio	FH 20	AA	NiMH		59287
Casio	GV-10	AA	NiMH		59287
Casio	QV-3EX	AA	NiMH		59287
Casio	QV-10A	AA	NiMH		59287
Casio	QV-70	AA	NiMH		59287
Casio	QV-100	AA	NiMH		59287
Casio	QV-300	AA	NiMH		59287
Casio	QV-700	AA	NiMH		59287
Casio	QV-780	AA	NiMH		59287
Casio	QV-2000UX/Ir	AA	NiMH		59287
Casio	QV-2300UX	AA	NiMH		59287
Casio	QV-2400UX	AA	NiMH		59287
Casio	QV-2800UX	AA	NiMH		59287
Casio	QV-2900UX	AA	NiMH		59287
Casio	QV-3000EX/Ir	AA	NiMH		59287
Casio	QV-3500EX	AA	NiMH		59287
Casio	QV-4000	AA	NiMH		59287
Casio	QV-5000SX	AA	NiMH		59287
Casio	QV-5500SX	AA	NiMH		59287
Casio	QV-5700	AA	NiMH		59287
Casio	QV-7000SX	AA	NiMH		59287
Casio	QV-8000SX	AA	NiMH		59287
Casio	QV-R40	AA	NiMH		59287
Casio	QV-R41	AA	NiMH		59287
Casio	QV-R51	AA	NiMH		59287
Casio	QV-R52	AA	NiMH		59287
Casio	QV-R61	AA	NiMH		59287
Casio	QV-R62	AA	NiMH		59287
Fuji	Digital Q1	AA	NiMH		59287
Fuji	DS 7	AA	NiMH		59287
Fuji	DX 5	AA	NiMH		59287
Fuji	DX 7	AA	NiMH		59287
Fuji	DX 8	AA	NiMH		59287
Fuji	DX 9	3,7V/2000mAh	BDP-FNP100	B122	59332
Fuji	DX 10	AA	NiMH		59287
Fuji	EX 20	AA	NiMH		59287
Fuji	FinePix 30i	AA	NiMH		59287
Fuji	FinePix 40i	AA	NiMH		59287

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



Fuji	FinePix 1300	AA	NiMH		59287
Fuji	FinePix 1400 Zoom	AA	NiMH		59287
Fuji	FinePix 2300	AA	NiMH		59287
Fuji	FinePix 2400 Zoom	AA	NiMH		59287
Fuji	FinePix 2600 Zoom	AA	NiMH		59287
Fuji	FinePix 2800 Zoom	AA	NiMH		59287
Fuji	FinePix 4700 Zoom	AA	NiMH		59287
Fuji	FinePix 4800 Zoom	3,7V/1400mAh	BDP-FNP80	B121	59331
Fuji	FinePix 4900 Zoom	3,7V/1400mAh	BDP-FNP80	B121	59331
Fuji	FinePix 6800 Zoom	3,7V/1400mAh	BDP-FNP80	B121	59331
Fuji	FinePix 6900 Zoom	3,7V/1400mAh	BDP-FNP80	B121	59331
Fuji	FinePix A101	AA	NiMH		59287
Fuji	FinePix A120	AA	NiMH		59287
Fuji	FinePix A201	AA	NiMH		59287
Fuji	FinePix A202	AA	NiMH		59287
Fuji	FinePix A203	AA	NiMH		59287
Fuji	FinePix A204	AA	NiMH		59287
Fuji	FinePix A205S	AA	NiMH		59287
Fuji	FinePix A210	AA	NiMH		59287
Fuji	FinePix A303	AA	NiMH		59287
Fuji	FinePix A310	AA	NiMH		59287
Fuji	FinePix A330	AA	NiMH		59287
Fuji	FinePix A340	AA	NiMH		59287
Fuji	FinePix A345	AA	NiMH		59287
Fuji	FinePix A350	AA	NiMH		59287
Fuji	BIGJOB HD-3W	AA	NiMH		59287
Fuji	FinePix A400	AA	NiMH		59287
Fuji	FinePix A500	AA	NiMH		59287
Fuji	FinePix A510	AA	NiMH		59287
Fuji	FinePix A600	AA	NiMH		59287
Fuji	FinePix A610	AA	NiMH		59287
Fuji	FinePix A700	AA	NiMH		59287
Fuji	FinePix A800	AA	NiMH		59287
Fuji	FinePix A820	AA	NiMH		59287
Fuji	FinePix A825	AA	BRAUN NiMH 2701		59287
Fuji	FinePix A850	AA	NiMH		59287
Fuji	FinePix A900	AA	NiMH		59287
Fuji	FinePix A 920	AA	BRAUN NiMH 2701		59287
Fuji	FinePix AV 100	AA	BRAUN NiMH 2701		59287
Fuji	FinePix AX 200	AA	BRAUN NiMH 2701		59287
Fuji	FinePix E500	AA	BRAUN NiMH 2701		59287
Fuji	FinePix E510	AA	BRAUN NiMH 2701		59287

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



Fuji	FinePix E550	AA	BRAUN NiMH 2701		59287
Fuji	FinePix E900	AA	BRAUN NiMH 2701		59287
Fuji	FinePix F10	3,7V/1800mAh	BDP-FNP120	B123	59333
Fuji	FinePix F11	3,7V/1800mAh	BDP-FNP120	B123	59333
Fuji	FinePix F20	3,7V/1150mAh	BDP-FNP70	B15	59213
Fuji	FinePix F30	3,7V/1800mAh	BDP-FNP95	B16	59214
Fuji	FinePix F31fd	3,7V/1800mAh	BDP-FNP95	B16	59214
Fuji	FinePix F40fd	3,7V/750mAh	BDP-FNP40	B10	59209
Fuji	FinePix F45fd	3,7V/1150mAh	BDP-FNP70	B15	59213
Fuji	FinePix F47fd	3,7V/1150mAh	BDP-FNP70	B15	59213
Fuji	FinePix F50fd	3,7V/1000mAh	BDP-FNP50	B94	59304
Fuji	FinePix F60fd	3,7V/1000mAh	BDP-FNP50	B94	59304
Fuji	FinePix F100fd	3,7V/1000mAh	BDP-FNP50	B94	59304
Fuji	FinePix F-70 EXR	3,7V/1000mAh	BDP-FNP50	B94	59304
Fuji	FinePix F80 EXR	3,7V/1000mAh	BDP-FNP50	B94	59304
Fuji	FinePix F170 EXR	3,7V/1000mAh	BDP-FNP50	B94	59304
Fuji	FinePixF200EXR	3,7V/1000mAh	BDP-FNP50	B94	59304
Fuji	FinePixF300EXR	3,7V/1000mAh	BDP-FNP50	B94	59304
Fuji	FinePix F401 Zoom	3,7V/1100mAh	BDP-FNP60	B12	59211
Fuji	FinePix F402	3,7V/750mAh	BDP-FNP40	B10	59209
Fuji	FinePix F410	3,7V/1100mAh	BDP-FNP60	B12	59211
Fuji	FinePix F455	3,7V/750mAh	BDP-FNP40	B10	59209
Fuji	FinePix F460	3,7V/750mAh	BDP-FNP40	B10	59209
Fuji	FinePix F470	3,7V/750mAh	BDP-FNP40	B10	59209
Fuji	FinePix F480	3,7V/750mAh	BDP-FNP40	B10	59209
Fuji	FinePix F500EXR	3,7V/1000mAh	BDP-FNP50	B94	59304
Fuji	FinePix F550EXR	3,7V/1000mAh	BDP-FNP50	B94	59304
Fuji	FinePix F600EXR		not available		
Fuji	FinePix F601Zoom	3,7V/1100mAh	BDP-FNP60	B12	59211
Fuji	FinePix F603	3,7V/1100mAh	BDP-FNP60	B12	59211
Fuji	FinePix F610	3,7V/750mAh	BDP-FNP40	B10	59209
Fuji	FinePix F650	3,7V/750mAh	BDP-FNP40	B10	59209
Fuji	FinePix F700	3,7V/750mAh	BDP-FNP40	B10	59209
Fuji	FinePix F710	3,7V/750mAh	BDP-FNP40	B10	59209
Fuji	FinePix F810	3,7V/750mAh	BDP-FNP40	B10	59209
Fuji	FinePix HS10	AA	NiMH		59287
Fuji	FinePix HS20EXR	AA	NiMH		59287
Fuji	FinePix J10	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix J20	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix J25	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix J27	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	Fine Pix J30	3,7V/660mAh	BDP-FNP45	B95	59305

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE

Fuji	FinePix J50	3,7V/750mAh	BDP-FNP40	B10	59209
Fuji	FinePix J100	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix J110w	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix J120	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix J150W	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix J210	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix J250	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix JV100	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix JZ 300	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix JZ 500	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix JX 200	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix JX 280	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix JX 300	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix JX 370		not available		
Fuji	FinePix JX 400	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix M603	3,7V/1100mAh	BDP-FNP60	B12	59211
Fuji	FinePix M603Zoom	3,7V/1800mAh	BDP-FNP120	B123	59333
Fuji	FinePix S1 Pro	AA	NiMH		59287
Fuji	FinePix S2 Pro	AA	NiMH		59287
Fuji	FinePix S3 Pro	AA	NiMH		59287
Fuji	FinePix S5 Pro	7,4V/1500mAh	BDO-FNP150	B125	59335
Fuji	FinePix S20 Pro	AA	NiMH		59287
Fuji	FinePix S100FS	7,4V/1150mAh	BDP-FNP140	B124	59334
Fuji	FinePix S200EXR	7,4V/1150mAh	BDP-FNP140	B124	59334
Fuji	FinePix S304	AA	NiMH		59287
Fuji	FinePix S602Zoom	AA	NiMH		59287
Fuji	FinePix S1000fd	AA	NiMH		59287
Fuji	FinePix S 1500	AA	NiMH		59287
Fuji	FinePix S1600	AA	NiMH		59287
Fuji	Fine Pix S1800	AA	NiMH		59287
Fuji	Fine Pix S2950	AA	NiMH		59287
Fuji	FinePix S 2000HD	AA	NiMH		59287
Fuji	FinePix S 2500HD	AA	NiMH		59287
Fuji	Fine Pix S2800HD	AA	NiMH		59287
Fuji	FinePix S2000HP	AA	NiMH		59287
Fuji	FinePix S3300	AA	NiMH		59287
Fuji	FinePix S3000	AA	NiMH		59287
Fuji	FinePix S3500	AA	NiMH		59287
Fuji	FinePix S4000	AA	NiMH		59287
Fuji	FinePix S5000	AA	NiMH		59287
Fuji	FinePix S5500	AA	NiMH		59287
Fuji	FinePix S5600	AA	NiMH		59287

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE

Fuji	FinePix S5700	AA	NiMH		59287
Fuji	Finepix S5800	AA	NiMH		59287
Fuji	FinePix S6500fd	AA	NiMH		59287
Fuji	FinePix S7000	AA	NiMH		59287
Fuji	FinePix S8000fd	AA	NiMH		59287
Fuji	FinePix S8100fd	AA	NiMH		59287
Fuji	FinePix S9500	AA	NiMH		59287
Fuji					
Fuji	FinePix T200	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix T300	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix V10	3,7V/750mAh	BDP-FNP40	B10	59209
Fuji	FinePix X100	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix XP30	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix Z1	3,7V/750mAh	BDP-FNP40	B10	59209
Fuji	FinePix Z2	3,7V/750mAh	BDP-FNP40	B10	59209
Fuji	FinePix Z3	3,7V/750mAh	BDP-FNP40	B10	59209
Fuji	FinePix Z5fd	3,7V/750mAh	BDP-FNP40	B10	59209
Fuji	FinePix Z10fd	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix Z20fd	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix Z30	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix Z33WP	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix Z35	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix Z37	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix Z70	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix Z90		not available		
Fuji	FinePix Z100fd	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix Z200fd	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix Z300	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePix Z700EXR	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePixZ800EXR	3,7V/660mAh	BDP-FNP45	B95	59305
Fuji	FinePixZ900EXR		not available		
Fuji	FinePixZ950EXR		not available		
Fuji	FinePix Real 3DW1	3,7V/1800mAh	BDP-FNP95	B16	59214
Fuji	FinePix Real 3DW3	3,7V/1000mAh	BDP-FNP50	B94	59304
Fuji	FinePix XP10	3,7V/660mAh	BDP-FNP45	B95	59305
HP	MX-600 Zoom	3,7V/2000mAh	BDP-FNP100	B122	59332
HP	MX-700	3,7V/2000mAh	BDP-FNP100	B122	59332
HP	MX-1200	AA	NiMH		59287
HP	MX-1500	AA	NiMH		59287
HP	MX-1700Zoom	3,7V/1400mAh	BDP-FNP80	B121	59331
HP	MX-2700	3,7V/1400mAh	BDP-FNP80	B121	59331
HP	MX-2900Zoom	3,7V/1400mAh	BDP-FNP80	B121	59331

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



HP	MX-4900Zoom	3,7V/1400mAh	BDP-FNP80	B121	59331
HP	MX-5000	AA	NiMH		59287
HP	MX-6800	3,7V/1400mAh	BDP-FNP80	B121	59331
HP	MX-6900	3,7V/1400mAh	BDP-FNP80	B121	59331
HP	M447	AA	NiMH		59287
HP	M527	AA	NiMH		59287
HP	M537	AA	NiMH		59287
HP	M547	AA	NiMH		59287
HP	M627	AA	NiMH		59287
HP	M637	AA	NiMH		59287
HP	M737	AA	NiMH		59287
HP	Mz67	AA	NiMH		59287
HP	R507	3,7V/1100mAh	BDP-FNP60	B12	59211
HP	R707	3,7V/1100mAh	BDP-FNP60	B12	59211
HP	R717	3,7V/1100mAh	BDP-FNP60	B12	59211
HP	R718	3,7V/1100mAh	BDP-FNP60	B12	59211
HP	R 727	3,7V/1100mAh	BDP-FNP60	B12	59211
HP	R742	3,7V/1100mAh	BDP-FNP60	B12	59211
HP	R827	3,7V/1100mAh	BDP-FNP60	B12	59211
HP	R837	3,7V/1100mAh	BDP-FNP60	B12	59211
HP	R847	3,7V/1100mAh	BDP-FNP60	B12	59211
HP	R927	3,7V/1100mAh	BDP-FNP60	B12	59211
HP	R937	3,7V/1100mAh	BDP-FNP60	B12	59211
HP	R967	3,7V/1100mAh	BDP-FNP60	B12	59211
Hyundai	A 1227	AA	NiMH		59287
Hyundai	A 5324	AA	NiMH		59287
Hyundai	A 5324i	AA	NiMH		59287
Hyundai	A 8324	AA	NiMH		59287
Hyundai	A 9324	AA	NiMH		59287
Hyundai	A 9325	AA	NiMH		59287
Hyundai	L 5100S	not available			
Hyundai	L 7330	3,7V/750mAh	BDP-FNP40	B10	59209
Hyundai	S 800	3,7V/750mAh	BDP-FNP40	B10	59209
Hyundai	S 5027 WP	AAA			59288
Kodak	C140	AA	NiMH		59287
Kodak	C142	AA	NiMH		59287
Kodak	C143	AA	NiMH		59287
Kodak	C180	AA	NiMH		59287
Kodak	C182	AA	NiMH		59287
Kodak	C183	AA	NiMH		59287
Kodak	C190	AA	NiMH		59287
Kodak	C195	AA	NiMH		59287

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



Kodak	C310	AA	NiMH		59287
Kodak	C330	AA	NiMH		59287
Kodak	C433	AA	NiMH		59287
Kodak	C503	AA	NiMH		59287
Kodak	C530	AA	NiMH		59287
Kodak	C533	AA/CR-V3	NiMH		
Kodak	C603	AA	NiMH		59287
Kodak	C613	AA	NiMH		59287
Kodak	C643	AA/CR-V3	NiMH		
Kodak	C653	AA	NiMH		59287
Kodak	C663	AA/CR-V3	NiMH		
Kodak	C713	AA	NiMH		59287
Kodak	C743	AA	NiMH		59287
Kodak	C813	AA	NiMH		59287
Kodak	C875	AA/CR-V3	NiMH		
Kodak	C913	AA	NiMH		59287
Kodak	C1013	AA	NiMH		59287
Kodak	DC4800	3,7V/1400mAh	BDP-FNP80	B121	59331
Kodak	DC4800Zoom	3,7V/1400mAh	BDP-FNP80	B121	59331
Kodak	DX 6490	3,7V/1700mAh	BDP-DBL50	B137	59345
Kodak	DX 7440	3,7V/1700mAh	BDP-DBL50	B137	59345
Kodak	DX 7440 Zoom	3,7V/1700mAh	BDP-DBL50	B137	59345
Kodak	DX 7590	3,7V/1700mAh	BDP-DBL50	B137	59345
Kodak	DX 7590 Zoom	3,7V/1700mAh	BDP-DBL50	B137	59345
Kodak	DX 7630	3,7V/1700mAh	BDP-DBL50	B137	59345
Kodak	Easy Share Max	AA	NiMH		59287
Kodak	Easy Share Mini	3,7V/660mAh	BDP-KLIC7006	B96	59306
Kodak	Easy Share Sport	AA	NiMH		59287
Kodak	Easy Share Touch	3,7V/660mAh	BDP-KLIC7006	B96	59306
Kodak	Easy Share Touch M5370	3,7V/660mAh	BDP-KLIC7006	B96	59306
Kodak	M23	3,7V/660mAh	BDP-KLIC7006	B96	59306
Kodak	M320	3,7V/720mAh	BDP-KLIC7001	B25	59223
Kodak	M340	3,7V/720mAh	BDP-KLIC7001	B25	59223
Kodak	M341	3,7V/720mAh	BDP-KLIC7001	B25	59223
Kodak	M380	3,7V/1050mAh	BDP-KLIC7003	B27	59225
Kodak	M381	3,7V/1050mAh	BDP-KLIC7003	B27	59225
Kodak	M420	3,7V/1050mAh	BDP-KLIC7003	B27	59225
Kodak	M522	3,7V/660mAh	BDP-KLIC7006	B96	59306
Kodak	M530	3,7V/660mAh	BDP-KLIC7006	B96	59306
Kodak	M531	3,7V/660mAh	BDP-KLIC7006	B96	59306
Kodak	M532	3,7V/660mAh	BDP-KLIC7006	B96	59306
Kodak	M550	3,7V/660mAh	BDP-KLIC7006	B96	59306

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Kodak	M552	3,7V/660mAh	BDP-KLIC7006	B96	59306
Kodak	M575	3,7V/660mAh	BDP-KLIC7006	B96	59306
Kodak	M580	3,7V/660mAh	BDP-KLIC7006	B96	59306
Kodak	M583	3,7V/660mAh	BDP-KLIC7006	B96	59306
Kodak	M590		not available		
Kodak	M753	3,7V/720mAh	BDP-KLIC7001	B25	59223
Kodak	M763	3,7V/720mAh	BDP-KLIC7001	B25	59223
Kodak	M853	3,7V/720mAh	BDP-KLIC7001	B25	59223
Kodak	M863	3,7V/720mAh	BDP-KLIC7001	B25	59223
Kodak	M873	3,7V/660mAh	BDP-KLIC7006	B96	59306
Kodak	M873 Zoom	3,7V/660mAh	BDP-KLIC7006	B96	59306
Kodak	M883	3,7V/660mAh	BDP-KLIC7006	B96	59306
Kodak	M883 Zoom	3,7V/660mAh	BDP-KLIC7006	B96	59306
Kodak	M893IS	3,7V/720mAh	BDP-KLIC7001	B25	59223
Kodak	M1033	3,7V/1000mAh	BDP-KLIC7004	B97	59307
Kodak	M1063	3,7V/720mAh	BDP-KLIC7001	B25	59223
Kodak	M1073IS	3,7V/720mAh	BDP-KLIC7001	B25	59223
Kodak	M1093IS	3,7V/1000mAh	BDP-KLIC7004	B97	59307
Kodak	M5350	3,7V/660mAh	BDP-KLIC7006	B96	59306
Kodak	P712	3,7V/1800mAh	BDP-KLIC5001	B24	59222
Kodak	P850	3,7V/1700mAh	BDP-DBL50	B137	59345
Kodak	P880	3,7V/1800mAh	BDP-KLIC5001	B24	59222
Kodak	V570	3,7V/720mAh	BDP-KLIC7001	B25	59223
Kodak	V603	3,7V/600mAh	BDP-KLIC7002	B26	59224
Kodak	V610	3,7V/720mAh	BDP-KLIC7001	B25	59223
Kodak	V705	3,7V/720mAh	BDP-KLIC7001	B25	59223
Kodak	V803	3,7V/1050mAh	BDP-KLIC7003	B27	59225
Kodak	V1003	3,7V/1050mAh	BDP-KLIC7003	B27	59225
Kodak	V1073	3,7V/1000mAh	BDP-KLIC7004	B97	59307
Kodak	V1233	3,7V/1050mAh	BDP-KLIC7003	B27	59225
Kodak	V1253	3,7V/1000mAh	BDP-KLIC7004	B97	59307
Kodak	V1273	3,7V/1000mAh	BDP-KLIC7004	B97	59307
Kodak	Z612	3,7V/1520mAh	BDP-KLIC8000	B29	59227
Kodak	Z650	AA/CR-V3	NiMH		59287
Kodak	Z710	AA/CR-V3	NiMH		59287
Kodak	Z712 IS	AA/CR-V3	NiMH		59287
Kodak	Z 730	3,7V/1700mAh	BDP-DBL50	B137	59345
Kodak	Z 730 Zoom	3,7V/1700mAh	BDP-DBL50	B137	59345
Kodak	Z 750	3,7V/1100mAh	BDP-FNP60	B12	59211
Kodak	Z 760	3,7V/1700mAh	BDP-DBL50	B137	59345
Kodak	Z 760 Zoom	3,7V/1700mAh	BDP-DBL50	B137	59345
Kodak	Z812IS	AA/CR-V3	NiMH		59287

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Kodak	Z885	AA/CR-V3	NiMH		59287
Kodak	Z915	AA	NiMH		59287
Kodak	Z950	3,7V/1050mAh	BDP-KLIC7003	B27	59225
Kodak	Z950IS	3,7V/1050mAh	BDP-KLIC7003	B27	59225
Kodak	SLICE	3,7V/730mAh	not available		
Kodak	SLICE Touchscreen	3,7V/730mAh	not available		
Kodak	Z980	AA	NiMH		59287
Kodak	Z981	AA	NiMH		59287
Kodak	Z1012IS	3,7V/1520mAh	BDP-KLIC8000	B29	59227
Kodak	Z1015IS	3,7V/1520mAh	BDP-KLIC8000	B29	59227
Kodak	Z1085IS	3,7V/1520mAh	BDP-KLIC8000	B29	59227
Kodak	Z1275	AA	NiMH		59287
Kodak	Z1285	AA	NiMH		59287
Kodak	Z1485IS	3,7V/1520mAh	BDP-KLIC8000	B29	59227
Kodak	Z5010	AA	NiMH		59287
Kodak	Z 7590	3,7V/1700mAh	BDP-DBL50	B137	59345
Kodak	Z 7590 Zoom	3,7V/1700mAh	BDP-DBL50	B137	59345
Kodak	Z D710	AA	NiMH		59287
Kodak	Z8612IS	3,7V/1520mAh	BDP-KLIC8000	B29	59227
Kodak	Easy Share One	3,7V/1100mAh	BDP-FNP60	B12	59211
Kodak	LS 420	3,7V/1100mAh	BDP-FNP60	B12	59211
Kodak	LS 443	3,7V/1100mAh	BDP-FNP60	B12	59211
Kodak	LS 633	3,7V/1100mAh	BDP-FNP60	B12	59211
Kodak	LS 742	3,7V/1100mAh	BDP-FNP60	B12	59211
Kodak	LS753	3,7V/1100mAh	BDP-FNP60	B12	59211
Konica/ Minolta	DG-X50-K	3,7V/660mAh	BDP-PELI72	B120	59330
Konica/ Minolta	DG-X50R	3,7V/660mAh	BDP-PELI72	B120	59330
Konica/ Minolta	DG-X50S	3,7V/660mAh	BDP-PELI72	B120	59330
Konica/ Minolta	Digital DG5 W	7,4V/800mAh	BDP-ENEL1	B17	59215
Konica/ Minolta	Dimage A1	7,4V/1300mAh	BDP-PLi50	B91	59301
Konica/ Minolta	Dimage A2	7,4V/1300mAh	BDP-PLi50	B91	59301
Konica/ Minolta	Dimage A200	7,4V/800mAh	BDP-ENEL1	B17	59215
Konica/ Minolta	Dimage E40	3,7V/720mAh	BDP-MNP900	B104	59314
Konica/ Minolta	Dimage E50	3,7V/720mAh	BDP-MNP900	B104	59314
Konica/ Minolta	Dimage G400		not available		
Konica/ Minolta	Dimage G500		not available		
Konica/ Minolta	Dimage G530		not available		
Konica/ Minolta	Dimage G600		not available		
Konica/ Minolta	Dimage X50	3,7V/660mAh	BDP-PELI72	B120	59330
Konica/ Minolta	Dimage X60	3,7V/660mAh	BDP-PELI72	B120	59330
Konica/ Minolta	Dimage Xg	3,7V/700mAh	BDP-MNP200	B90	59299
Konica/ Minolta	Dimage X	3,7V/700mAh	BDP-MNP200	B90	59299

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Konica/ Minolta	Dimage X1	3,7V/820mAh	BDP-SLB0837	B41	59239
Konica/ Minolta	Dimage Xg	3,7V/700mAh	BDP-MNP200	B90	59299
Konica/ Minolta	Dimage Xi	3,7V/700mAh	BDP-MNP200	B90	59299
Konica/ Minolta	Dimage Xt	3,7V/700mAh	BDP-MNP200	B90	59299
Konica/ Minolta	Dimage XtBiz	3,7V/700mAh	BDP-MNP200	B90	59299
Leica	C-Lux 2	3,7V/1150mAh	BDP-BPDC4	B35	59233
Leica	D-Lux 3	3,7V/1150mAh	BDP-BPDC4	B35	59233
Leica	D-Lux 4	3,7V/1150mAh	BDP-BPDC4	B35	59233
Leica	D-Lux 5	3,7V/1150mAh	BDP-FNP70	B15	59213
Leica	V-Lux 1	7,4V/750mAh	BDP-S006	B45	59243
Leica	V-Lux 2		not available		
Leica	V-Lux 20		not available		
Leica	M8	3,7V/1900mAh	BDP-BM8	B34	59232
Leica	M9	3,7V/1900mAh	BDP-BM8	B34	59232
Leica	X1		not available		
Maginon	Digilux Zoom	3,7V/1400mAh	BDP-FNP80	B121	59331
Maginon	DC 6600	3,7V/720mAh	BDP-MNP900	B104	59314
Maginon	DC 6800	3,7V/720mAh	BDP-MNP900	B104	59314
Maginon	DC 6900	AA	NiMH		59287
Maginon	DC 7800	AA	NiMH		59287
Maginon	DC 8000	AA	NiMH		59287
Maginon	DSC 55	AA	NiMH		59287
Maginon	DSC 5060	AA	NiMH		59287
Maginon	Marlin	AA	NiMH		59287
Maginon	Slimline X4	3,7V/720mAh	BDP-MNP900	B104	59314
Maginon	Slimline X5	3,7V/720mAh	BDP-MNP900	B104	59314
Maginon	Slimline X6	3,7V/720mAh	BDP-MNP900	B104	59314
Maginon	Slimline X50	3,7V/720mAh	BDP-MNP900	B104	59314
Maginon	Slimline X60	3,7V/720mAh	BDP-MNP900	B104	59314
Maginon	Slimline XS6	3,7V/720mAh	BDP-MNP900	B104	59314
Maginon	Superslim XS 7	3,7V/1100mAh	BDP-FNP60	B12	59211
Maginon	SuperSlim XS60		BDP-FNP60	B12	59211
Maginon	SuperSlim XS70		BDP-FNP60	B12	59211
Maginon	Superslim XS 80	3,7V/1100mAh	BDP-FNP60	B12	59211
Maginon	MD 85544	AA	NiMH		59287
Maginon	MD 85680	AA	NiMH		59287
Maginon	MD 85733	3,7V/1100mAh	BDP-FNP60	B12	59211
Maginon	MD 85806	3,7V/1100mAh	BDP-FNP60	B12	59211
Maginon	MD 85820	3,7V/720mAh	BDP-MNP900	B104	59314
Maginon	MD 85830	AA	NiMH		59287
Maginon	MD 85833	AA	NiMH		59287
Nikon	Coolpix 775	7,4V/800mAh	BDP-ENEL1	B17	59215

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Nikon	Coolpix 880	7,4V/800mAh	BDP-ENEL1	B17	59215
Nikon	Coolpix 885	7,4V/800mAh	BDP-ENEL1	B17	59215
Nikon	Coolpix 995	7,4V/800mAh	BDP-ENEL1	B17	59215
Nikon	Coolpix 3700	3,7V/1100mAh	BDP-ENEL5	B21	59219
Nikon	Coolpix 4200	3,7V/1100mAh	BDP-ENEL5	B21	59219
Nikon	Coolpix 4500	3,7V/1100mAh	BDP-ENEL5	B21	59219
Nikon	Coolpix 4800	7,4V/800mAh	BDP-ENEL1	B17	59215
Nikon	Coolpix 5000	7,4V/800mAh	BDP-ENEL1	B17	59215
Nikon	Coolpix 5400	7,4V/800mAh	BDP-ENEL1	B17	59215
Nikon	Coolpix 5700	7,4V/800mAh	BDP-ENEL1	B17	59215
Nikon	Coolpix 5900	3,7V/1100mAh	BDP-ENEL5	B21	59219
Nikon	Coolpix 7900	3,7V/1100mAh	BDP-ENEL5	B21	59219
Nikon	Coolpix 8700	7,4V/800mAh	BDP-ENEL1	B17	59215
Nikon	D2Xs	11,1V/2600mAh	BDP-ENEL4A	B20	59218
Nikon	D2Hs	11,1V/2600mAh	BDP-ENEL4A	B20	59218
Nikon	D3	11,1V/2600mAh	BDP-ENEL4A	B20	59218
Nikon	D3s	11,1V/2600mAh	BDP-ENEL4A	B20	59218
Nikon	D3x	11,1V/2600mAh	BDP-ENEL4A	B20	59218
Nikon	D200	7,4V/1620mAh	BDP-ENEL3E	B19	59217
Nikon	D300	7,4V/1620mAh	BDP-ENEL3E	B19	59217
Nikon	D300s	7,4V/1620mAh	BDP-ENEL3E	B19	59217
Nikon	D700	7,4V/1620mAh	BDP-ENEL3E	B19	59217
Nikon	D40	7,4V/1100mAh	BDP-ENEL9	B23	59221
Nikon	D40x	7,4V/1100mAh	BDP-ENEL9	B23	59221
Nikon	D50	7,4V/1620mAh	BDP-ENEL3	B18	59216
Nikon	D60	7,4V/1100mAh	BDP-ENEL9	B23	59221
Nikon	D70	7,4V/1620mAh	BDP-ENEL3	B18	59216
Nikon	D70s	7,4V/1620mAh	BDP-ENEL3	B18	59216
Nikon	D80	7,4V/1620mAh	BDP-ENEL3	B18	59216
Nikon	D 90	7,4V/1620mAh	BDP-ENEL3E	B19	59217
Nikon	D100	7,4V/1620mAh	BDP-ENEL3	B18	59216
Nikon	D 300S	7,4V/1620mAh	BDP-ENEL3E	B19	59217
Nikon	D 3000	7,4V/1290mAh	BDP-ENEL9a	B165	59373
Nikon	D 3100		not available		
Nikon	D 5000	7,4V/1290mAh	BDP-ENEL9a	B165	59373
Nikon	D 7000		not available		
Nikon	Coolpix AW100	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix L2	AA	NiMH		59287
Nikon	Coolpix L3	AA	NiMH		59287
Nikon	Coolpix L4	AA	NiMH		59287
Nikon	Coolpix L5	AA	NiMH		59287
Nikon	Coolpix L6	AA	NiMH		59287

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE

Nikon	Coolpix L10	AA	NiMH		59287
Nikon	Coolpix L14	AA	NiMH		59287
Nikon	Coolpix L15	AA	NiMH		59287
Nikon	Coolpix L16	AA	NiMH		59287
Nikon	Coolpix L18	AA	NiMH		59287
Nikon	Coolpix L19	AA	NiMH		59287
Nikon	Coolpix L20	AA	NiMH		59287
Nikon	Coolpix L22	AA	NiMH		59287
Nikon	Coolpix L23	AA	NiMH		59287
Nikon	Coolpix L100	AA	NiMH		59287
Nikon	Coolpix L110	AA	NiMH		59287
Nikon	Coolpix L120	AA	NiMH		59287
Nikon	Coolpix P3	3,7V/1100mAh	BDP-ENEL5	B21	59219
Nikon	Coolpix P4	3,7V/1100mAh	BDP-ENEL5	B21	59219
Nikon	Coolpix P5	3,7V/1100mAh	BDP-ENEL5	B21	59219
Nikon	Coolpix P50	AA	NiMH		59287
Nikon	Coolpix P60	AA	NiMH		59287
Nikon	Coolpix P80	3,7V/1100mAh	BDP-ENEL5	B21	59219
Nikon	Coolpix P90	3,7V/1100mAh	BDP-ENEL5	B21	59219
Nikon	Coolpix P100	3,7V/1100mAh	BDP-ENEL5	B21	59219
Nikon	Coolpix P300	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix P500	3,7V/1100mAh	BDP-ENEL5	B21	59219
Nikon	Coolpix P5000	3,7V/1100mAh	BDP-ENEL5	B21	59219
Nikon	Coolpix P5100	3,7V/1100mAh	BDP-ENEL5	B21	59219
Nikon	Coolpix P6000	3,7V/1100mAh	BDP-ENEL5	B21	59219
Nikon	Coolpix P7000	7,4V/800mAh	BDP-NEL14	B185	59394
Nikon	Coolpix P7100	7,4V/800mAh	BDP-NEL14	B185	59394
Nikon	Coolpix S5	3,7V/730mAh	BDP-ENEL8	B22	59220
Nikon	Coolpix S7c	3,7V/730mAh	BDP-ENEL8	B22	59220
Nikon	Coolpix S9	3,7V/730mAh	BDP-ENEL8	B22	59220
Nikon	Coolpix S10	3,7V/1100mAh	BDP-ENEL5	B21	59219
Nikon	Coolpix S50c	3,7V/730mAh	BDP-ENEL8	B22	59220
Nikon	Coolpix S51	3,7V/730mAh	BDP-ENEL8	B22	59220
Nikon	Coolpix S51c	3,7V/730mAh	BDP-ENEL8	B22	59220
Nikon	Coolpix S52	3,7V/730mAh	BDP-ENEL8	B22	59220
Nikon	Coolpix S52c	3,7V/730mAh	BDP-ENEL8	B22	59220
Nikon	Coolpix S60	3,7V/740mAh	BDP-EN-EL10	B48	59246
Nikon	Coolpix S70	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix S80	3,7V/740mAh	BDP-EN-EL10	B48	59246
Nikon	Coolpix S100	3,7V/700mAh	BDP-NENEL19	B179	59388
Nikon	Coolpix S200	3,7V/740mAh	BDP-EN-EL10	B48	59246
Nikon	Coolpix S210	3,7V/740mAh	BDP-EN-EL10	B48	59246

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Nikon	Coolpix S220	3,7V/740mAh	BDP-EN-EL10	B48	59246
Nikon	Coolpix S230	3,7V/740mAh	BDP-EN-EL10	B48	59246
Nikon	Coolpix S500 silver	3,7V/740mAh	BDP-EN-EL10	B48	59246
Nikon	Coolpix S500 schwarz	3,7V/740mAh	BDP-EN-EL10	B48	59246
Nikon	Coolpix S510	3,7V/740mAh	BDP-EN-EL10	B48	59246
Nikon	Coolpix S520	3,7V/740mAh	BDP-EN-EL10	B48	59246
Nikon	Coolpix S550	3,7V/680mAh	BDP-PELI78	B119	59329
Nikon	Coolpix S560	3,7V/680mAh	BDP-PELI78	B119	59329
Nikon	Coolpix S570	3,7V/740mAh	BDP-EN-EL10	B48	59246
Nikon	Coolpix S600	3,7V/740mAh	BDP-EN-EL10	B48	59246
Nikon	Coolpix S610	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix S610c	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix S620	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix S630	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix S640	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix S650	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix S700	3,7V/740mAh	BDP-EN-EL10	B48	59246
Nikon	Coolpix S710	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix S1000pj	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix S1100pj	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix S1200pj	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix S2500	3,7V/700mAh	BDP-NENEL19	B179	59388
Nikon	Coolpix 3000	3,7V/740mAh	BDP-EN-EL10	B48	59246
Nikon	Coolpix S3100	3,7V/700mAh	BDP-NENEL19	B179	59388
Nikon	Coolpix S4000	3,7V/740mAh	BDP-EN-EL10	B48	59246
Nikon	Coolpix S4100	3,7V/700mAh	BDP-NENEL19	B179	59388
Nikon	Coolpix S4150	3,7V/700mAh	BDP-NENEL19	B179	59388
Nikon	Coolpix S5100	3,7V/740mAh	BDP-EN-EL10	B48	59246
Nikon	Coolpix S6100	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix S6150	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix S6200	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix S8000	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix S8100	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix S8200	3,7V/1050mAh	BDP-ENEL12	B145	59353
Nikon	Coolpix S9100	3,7V/1050mAh	BDP-ENEL12	B145	59353
Olympus	C50Zoom	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Olympus	C60Zoom	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Olympus	C70 ZOOM	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Olympus	C760	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Olympus	C765	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Olympus	C770	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Olympus	C-5000 ZOOM	3,7V/1100mAh	BDP-LI10B/12B	B30	59228

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



Olympus	C-5060	7,4V/1620mAh	BDP-BLM1	B37	59235
Olympus	C-7070	7,4V/1620mAh	BDP-BLM1	B37	59235
Olympus	C-8080	7,4V/1620mAh	BDP-BLM1	B37	59235
Olympus	E-1	7,4V/1620mAh	BDP-BLM1	B37	59235
Olympus	E-3	7,4V/1620mAh	BDP-BLM1	B37	59235
Olympus	E-5	7,4V/1300mAh	BDP-OBLM5	B188	59397
Olympus	E-30	7,4V/1620mAh	BDP-BLM1	B37	59235
Olympus	E-300	7,4V/1620mAh	BDP-BLM1	B37	59235
Olympus	E-330	7,4V/1620mAh	BDP-BLM1	B37	59235
Olympus	E-400	7,4V/1150mAh	BDP-BLS1	B38	59236
Olympus	E-410	7,4V/1150mAh	BDP-BLS1	B38	59236
Olympus	E-420	7,4V/1150mAh	BDP-BLS1	B38	59236
Olympus	E-450	7,4V/1150mAh	BDP-BLS1	B38	59236
Olympus	E-500	7,4V/1620mAh	BDP-BLM1	B37	59235
Olympus	E-510	7,4V/1620mAh	BDP-BLM1	B37	59235
Olympus	E-520	7,4V/1620mAh	BDP-BLM1	B37	59235
Olympus	E-600	7,4V/1150mAh	BDP-BLS1	B38	59236
Olympus	E-620	7,4V/1150mAh	BDP-BLS1	B38	59236
Olympus	E-P1	7,4V/1150mAh	BDP-BLS1	B38	59236
Olympus	E-PL1	7,4V/1150mAh	BDP-BLS1	B38	59236
Olympus	E-PL2		not available		
Olympus	FE-20	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	FE-26	AA	NiMH		59287
Olympus	FE-45	AA	NiMH		59287
Olympus	FE-46	AA	NiMH		59287
Olympus	FE-47	AA	NiMH		59287
Olympus	FE-130	AA	NiMH		59287
Olympus	FE-140	AA	NiMH		59287
Olympus	FE150	3,7V/740mAh	BDP-LI40B	B32	59230
Olympus	FE160	3,7V/740mAh	BDP-LI40B	B32	59230
Olympus	FE-170	AA	NiMH		59287
Olympus	FE-180	AA	NiMH		59287
Olympus	FE-190	3,7V/740mAh	BDP-LI40B	B32	59230
Olympus	FE-200	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Olympus	FE-210	AA	NiMH		59287
Olympus	FE-230	3,7V/740mAh	BDP-LI40B	B32	59230
Olympus	FE-240	3,7V/740mAh	BDP-LI40B	B32	59230
Olympus	FE-250	3,7V/740mAh	BDP-LI40B	B32	59230
Olympus	FE-270	AA	NiMH		59287
Olympus	FE-280	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	FE-290	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	FE-300	3,7V/740mAh	BDP-LI42B	B32	59230

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE

Olympus	FE-310	AA	NiMH		59287
Olympus	FE-340	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	FE-350	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	FE-360	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	FE-370	3,7V/680mAh	BDP-OLI-60B	B146	59354
Olympus	FE-3010	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	FE-4000	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	FE-4010	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	FE -4030	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	FE -4020	3,7V/550mAh	BDP-OLI70	B187	59396
Olympus	FE -4040	3,7V/550mAh	BDP-OLI70	B187	59396
Olympus	FE-4050	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	FE-5000	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	FE-5020	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	FE-5030	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	FE-5035	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	FE-5040		not available		
Olympus	FE-5050	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	IR300	3,7V/740mAh	BDP-LI40B	B32	59230
Olympus	IR500	3,7V/740mAh	BDP-LI40B	B32	59230
Olympus	mju 300	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Olympus	mju 400	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Olympus	mju 410	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Olympus	mju 500	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Olympus	mju 550WP	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 890WP	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 600	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Olympus	mju 700	3,7V/740mAh	BDP-LI40B	B32	59230
Olympus	mju 720SW	3,7V/740mAh	BDP-LI40B	B32	59230
Olympus	mju 725SW	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 730	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 740	3,7V/740mAh	BDP-LI40B	B32	59230
Olympus	mju 750	3,7V/740mAh	BDP-LI40B	B32	59230
Olympus	mju 760	3,7V/740mAh	BDP-LI40B	B32	59230
Olympus	mju 770 SW	3,7V/740mAh	BDP-LI40B	B32	59230
Olympus	mju 780	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 790 SW	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 800	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Olympus	mju 810	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Olympus	mju 820	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 830	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 840	3,7V/740mAh	BDP-LI42B	B32	59230

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE

Olympus	mju 850SW	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 1000	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Olympus	mju 1010	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	mju 1020	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	mju 1030SW	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	mju 1040	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 1050SW	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 1060	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 1200	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju Tough 3000	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 5000	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 5010	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 6020	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	mju 7000	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 7010 Titanium	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 7020 Titanium	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 7030	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju 7040 Copper Blue	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	mju Tough 8020	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	mju 9000	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	mju 9010	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	mju TOUGH 1030SW	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	mju TOUGH 6000	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	mju TOUGH 6010 Tit.	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	mju TOUGH 6020	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	mju TOUGH 8000	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	mju TOUGH 8010	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	Pen EP1		not available		
Olympus	Pen EP2		not available		
Olympus	Pen EP3	7,4V/1150mAh	BDP-BLS1	B38	59236
Olympus	Pen E-PL2	7,4V/900mAh	BDP-BLS5	B189	59398
Olympus	Pen E-PL3	7,4V/1150mAh	BDP-BLS1	B38	59236
Olympus	Pen E-PM1	7,4V/1150mAh	BDP-BLS1	B38	59236
Olympus	SP-350	AA	NiMH		59287
Olympus	SP-510 UZ	AA	NiMH		59287
Olympus	SP-550 UZ	AA	NiMH		59287
Olympus	SP-560 UZ	AA	NiMH		59287
Olympus	SP-565 UZ	AA	NiMH		59287
Olympus	SP-570 UZ	AA	NiMH		59287
Olympus	SP-590UZ	AA	NiMH		59287
Olympus	SP-600UZ	AA	NiMH		59287
Olympus	SP-610UZ	AA	NiMH		59287

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Olympus	SP-700	3,7V/740mAh	BDP-LI40B	B32	59230
Olympus	SP-800UZ	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	SP-810UZ	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	STYLUS 1010	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	STYLUS 1020	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	STYLUS 1030SW	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	SZ-10	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	SZ-20	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	SZ-30	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	TG-310	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	TG-810	3,7V/925mAh	BDP-OLI50B	B102	59312
Olympus	VG-110	3,7V/550mAh	BDP-OLI70	B187	59396
Olympus	VG-130	3,7V/550mAh	BDP-OLI70	B187	59396
Olympus	VR-310	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	VR-325	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	VR-330	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	X825	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	X560 WP cooper organge	3,7V/740mAh	BDP-LI42B	B32	59230
Olympus	X940	3,7V/550mAh	BDP-OLI70	B187	59396
Olympus	XZ1	3,7V/925mAh	BDP-OLI50B	B102	59312
Panasonic	DMC-3D1		not available		
Panasonic	DMC-FP1		not available		
Panasonic	DMC-FP8	3,6V/940mAh	BDP-PBCF10E	B161	59369
Panasonic	DMC-FS3	3,7V/1000mAh	BDP-BCE10	B33	59231
Panasonic	DMC-FS5	3,7V/1000mAh	BDP-BCE10	B33	59231
Panasonic	DMC-FS6	3,6V/940mAh	BDP-PBCF10E	B161	59369
Panasonic	DMC-FS7	3,6V/940mAh	BDP-PBCF10E	B161	59369
Panasonic	DMC-FS10	3,6V/940mAh	BDP-PBCF10E	B161	59369
Panasonic	DMC-FS11	3,6V/940mAh	BDP-PBCF10E	B161	59369
Panasonic	DMC-FS15	3,6V/940mAh	BDP-PBCF10E	B161	59369
Panasonic	DMC-FS16		not available		
Panasonic	DMC-FS18		not available		
Panasonic	DMC-FS20	3,7V/1000mAh	BDP-BCE10	B33	59231
Panasonic	DMC-FS22		not available		
Panasonic	DMC-FS25	3,6V/940mAh	BDP-PBCF10E	B161	59369
Panasonic	DMC-FS30	3,6V/940mAh	BDP-PBCF10E	B161	59369
Panasonic	DMC-FS33	3,6V/940mAh	BDP-PBCF10E	B161	59369
Panasonic	DMC-FS35		not available		
Panasonic	DMC-FS37		not available		
Panasonic	DMC-FS62	3,6V/940mAh	BDP-PBCF10E	B161	59369
Panasonic	DMC-FT1	3,6V/940mAh	BDP-PBCF10E	B161	59369
Panasonic	DMC-FT2	3,6V/940mAh	BDP-PBCF10E	B161	59369

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE

Panasonic	DMC-FT3		not available		
Panasonic	DMC-FT10		not available		
Panasonic	DMC-FX2	3,7V/750mAh	CGA-S004		
Panasonic	DMC-FX03	3,7V/1150mAh	BDP-S005E	B39	59237
Panasonic	DMC-G3		not available		
Panasonic	DMC-GF1	7,2V/1250 mAh	BDP-PBLB13	B159	59367
Panasonic	DMC-GF2	7,2V/850 mAh	BDP-PBLD10	B191	59430
Panasonic	DMC-GF3		not available		
Panasonic	DMC-GF2C	7,2V/850 mAh	BDP-PBLD10	B191	59430
Panasonic	DMC-GF1K		not available		
Panasonic	DMC-GF2K	7,2V/850 mAh	BDP-PBLD10	B191	59430
Panasonic	DMC-GF2W	7,2V/850 mAh	BDP-PBLD10	B191	59430
Panasonic	DMC-G2W	7,2V/850 mAh	BDP-PBLD10	B191	59430
Panasonic	DMC-GF1C		not available		
Panasonic	DMC-GX1		not available		
Panasonic	DMC-FP1		not available		
Panasonic	DMC-FP8	3,6V/1000mAh	not available		
Panasonic	DMC-FX07	3,7V/1150mAh	BDP-S005E	B39	59237
Panasonic	DMC-FX7	3,7V/750mAh	CGS-S004		
Panasonic	DMC-FX8	3,7V/1150mAh	BDP-S005E	B39	59237
Panasonic	DMC-FX9	3,7V/1150mAh	BDP-S005E	B39	59237
Panasonic	DMC-FX10	3,7V/1150mAh	BDP-S005E	B39	59237
Panasonic	DMC-FX12	3,7V/1150mAh	BDP-S005E	B39	59237
Panasonic	DMC-FX30	3,7V/1000mAh	BDP-BCE10	B33	59231
Panasonic	DMC-FX33	3,7V/1000mAh	BDP-BCE10	B33	59231
Panasonic	DMC-FX35	3,7V/1000mAh	BDP-BCE10	B33	59231
Panasonic	DMC-FX37	3,7V/1000mAh	BDP-BCE10	B33	59231
Panasonic	DMC-FX40	3,6V/940mAh	BDP-PBCF10E	B161	59369
Panasonic	DMC-FX50	3,7V/1150mAh	BDP-S005E	B39	59237
Panasonic	DMC-FX55	3,7V/1000mAh	BDP-BCE10	B33	59231
Panasonic	DMC-FX60	3,6V/940mAh	BDP-PBCF10E	B161	59369
Panasonic	DMC-FX66	3,6V/940mAh	BDP-PBCF10E	B161	59369
Panasonic	DMC-FX70	3,6V/940mAh	BDP-PBCF10E	B161	59369
Panasonic	DMC-FX77		not available		
Panasonic	DMC-FX90		not available		
Panasonic	DMC-FX100	3,7V/1150mAh	BDP-S005E	B39	59237
Panasonic	DMC-FX150	3,7V/1150mAh	BDP-S005E	B39	59237
Panasonic	DMC-FX500	3,7V/1000mAh	BDP-BCE10	B33	59231
Panasonic	DMC-FX550	3,6V/940mAh	BDP-PBCF10E	B161	59369
Panasonic	DMC-FX-700	3,6V/940mAh	BDP-PBCF10E	B161	59369
Panasonic	DMC-FZ7	7,2V/750mAh	BDP-S006	B45	59243
Panasonic	DMC-FZ8	7,4V/750mAh	BDP-S006	B45	59243

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE

Panasonic	DMC-FZ18	7,4V/750mAh	BDP-S006	B45	59243
Panasonic	DMC-FZ28	7,4V/750mAh	BDP-S006	B45	59243
Panasonic	DMC-FZ30	7,4V/750mAh	BDP-S006	B45	59243
Panasonic	DMC-FZ38		not available		
Panasonic	DMC-FZ40	7,4V/750mAh	BDP-PBMB9	B190	59399
Panasonic	DMC-FZ45	7,4V/750mAh	BDP-PBMB9	B190	59399
Panasonic	DMC-FZ48	7,4V/750mAh	BDP-PBMB9	B190	59399
Panasonic	DMC-FZ50	7,4V/750mAh	BDP-S006	B45	59243
Panasonic	DMC-FZ100	7,4V/750mAh	BDP-PBMB9	B190	59399
Panasonic	DMC-FZ150		not available		
Panasonic	DMC-G 1	7,2V/1250mAh	BDP-PBLB13	B159	59367
Panasonic	DMC-G2	7,2V/1250mAh	BDP-PBLB13	B159	59367
Panasonic	DMC-G10	7,2V/1250mAh	BDP-PBLB13	B159	59367
Panasonic	DMC-GH 1K	7,2V/1250mAh	BDP-PBLB13	B159	59367
Panasonic	DMC-GH2		not available		
Panasonic	DMC-G 1K	7,2V/1250mAh	BDP-PBLB13	B159	59367
Panasonic	DMC-G10K		not available		
Panasonic	DMC-GF 1	7,2V/1250mAh	BDP-PBLB13	B159	59367
Panasonic	DMC-GF2		not available		
Panasonic	DMC G 1W	7,2V/1250mAh	BDP-PBLB13	B159	59367
Panasonic	DMC-L1	7,2V/1500mAh	CGR-S603		
Panasonic	DMC-L10	7,2V/1320mAh	BLA-13		
Panasonic	DMC-LS3	AA	NiMH		59287
Panasonic	DMC-LS60	AA	NiMH		59287
Panasonic	DMC-LS65	AA	NiMH		59287
Panasonic	DMC-LS75	AA	NiMH		59287
Panasonic	DMC-LS80	AA	NiMH		59287
Panasonic	DMC-LS85	AA	NiMH		59287
Panasonic	DMC-LX2	3,7V/1150mAh	BDP-S005E	B39	59237
Panasonic	LX-3	3,7V/1150mAh	BDP-S005E	B39	59237
Panasonic	LX-5		not available		
Panasonic	DMC-LZ3ES	AA	NiMH		59287
Panasonic	DMC-LZ5	AA	NiMH		59287
Panasonic	DMC-LZ6	AA	NiMH		59287
Panasonic	DMC-LZ7	AA	NiMH		59287
Panasonic	DMC-LZ8	AA	NiMH		59287
Panasonic	DMC-LZ10	AA	NiMH		59287
Panasonic	DMC-SV-AV100	3,7V/1100mAh	BDP-FNP60	B12	59211
Panasonic	DMC-TZ1	3,7V/1000mAh	BDP-S007	B40	59238
Panasonic	DMC-TZ2	3,7V/1000mAh	BDP-S007	B40	59238
Panasonic	DMC-TZ3	3,7V/1000mAh	BDP-S007	B40	59238
Panasonic	DMC-TZ4	3,7V/1000mAh	BDP-S007	B40	59238

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE

Panasonic	DMC-TZ5	3,7V/1000mAh	BDP-S007	B40	59238
Panasonic	DMC-TZ6	3,6V/895mAh	BDP-PBCG10	B160	59368
Panasonic	DMC-TZ7	3,6V/895mAh	BDP-PBCG10	B160	59368
Panasonic	DMC-TZ8	3,6V/895mAh	BDP-PBCG10	B160	59368
Panasonic	DMC-TZ10	3,6V/895mAh	BDP-PBCG10	B160	59368
Panasonic	DMC-TZ18		not available		
Panasonic	DMC-TZ22		not available		
Panasonic	DMC-ZX1	3,6V/895mAh	BDP-PBCG10	B160	59368
Panasonic	DMC-ZX3	3,6V/895mAh	BDP-PBCG10	B160	59368
Panasonic	HM-TA1		not available		
Panasonic	HM-TA2		not available		
Panasonic	HM-TA20		not available		
Panasonic	HX-DC1		not available		
Panasonic	HX-DC10		not available		
Panasonic	HX-WA10		not available		
Pentax	*istDL	AA	NiMH		59287
Pentax	*istDL2	AA/CR-V3	NiMH		59287
Pentax	*istDs	AA	NiMH		59287
Pentax	*istD	AA	NiMH		59287
Pentax	K-m	AA	NiMH		59287
Pentax	K-5	7,2V/1860mAh	BDP-PDLI90	B163	59371
Pentax	K 7	7,2V/1860mAh	BDP-PDLI90	B163	59371
Pentax	K10D	7,4V/1300mAh	BDP-PLi50	B91	59301
Pentax	K10D GP	7,4V/1300mAh	BDP-PLi50	B91	59301
Pentax	K20D	7,4V/1300mAh	BDP-PLi50	B91	59301
Pentax	K100D	AA	NiMH		59287
Pentax	K100D Super	AA	NiMH		59287
Pentax	K110D	AA	NiMH		59287
Pentax	K200D	AA	NiMH		59287
Pentax	K-r	7,4V/900mAh	BDP-D-LI109	B178	59387
Pentax	K-x	AA	NiMH		59287
Pentax	NB1000	3,7V/680mAh	BDP-PDLI88	B157	59366
Pentax	Q	3,7V/1000mAh	BDP-PELI68	B118	59328
Pentax	X 70	3,7V/925mAh	BDP-PDLI92	B162	59370
Pentax	X90	3,7V/1250 mAh	BDP-D-LI106	B176	59384
Pentax	Optio 30	AA	NiMH		59287
Pentax	Optio 50	AA	NiMH		59287
Pentax	Optio 50L	AA	NiMH		59287
Pentax	Optio 60	AA	NiMH		59287
Pentax	Optio 330	3,7V/1100mAh	BDP-FNP60	B12	59211
Pentax	Optio 430	3,7V/1100mAh	BDP-FNP60	B12	59211
Pentax	Optio 450	3,7V/1800mAh	BDP-FNP120	B123	59333

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Pentax	Optio 550	3,7V/1800mAH	BDP-FNP120	B123	59333
Pentax	Optio 555	3,7V/1800mAH	BDP-FNP120	B123	59333
Pentax	Optio 750	3,7V/1800mAH	BDP-FNP120	B123	59333
Pentax	Optio 750Z	3,7V/1800mAH	BDP-FNP120	B123	59333
Pentax	Optio A10	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio A10	3,7V/680mAh	BDP-DLI85	B169	59377
Pentax	Optio A20	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio A30	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio A40	3,7V/1000mAh	BDP-PELI68	B118	59328
Pentax	Optio E10	AA	NiMH		59287
Pentax	Optio E20	AA	NiMH		59287
Pentax	Optio E30	AA	NiMH		59287
Pentax	Optio E40	AA	NiMH		59287
Pentax	Optio E50	AA	NiMH		59287
Pentax	Optio E60	AA	NiMH		59287
Pentax	Optio E65	3,7V/680mAh	BRAUN-PDLI88	B157	59366
Pentax	Optio E 70	AA	NiMH		59287
Pentax	Option E 75	3,7V/820 mAh	BDP-PELI95		
Pentax	Optio E 70L	AA	NiMH		59287
Pentax	Optio E 80	AA	NiMH		59287
Pentax	Optio E 85	3,7V/820 mAh	BDP-PELI95		
Pentax	Option E90	AA	NiMH		59287
Pentax	Option H90	3,7V/680mAh	BDP-PDLI88	B157	59366
Pentax	Option I-10	3,7V/925mAh	BDP-PDLI92	B162	59370
Pentax	Option K-7	7,2V/1860mAh	BDP-PDLI90	B163	59371
Pentax	Optio L20	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio L40	3,7V/660mAh	BDP-PELI63	B117	59327
Pentax	Optio L63	3,7V/740 mAh	BDP-PELI63	B42	59240
Pentax	Optio M10	AA	NiMH		59287
Pentax	Optio M20	AA	NiMH		59287
Pentax	Optio M30	3,7V/660mAh	BDP-PELI63	B117	59327
Pentax	Optio M40	3,7V/660mAh	BDP-PELI63	B117	59327
Pentax	Optio M50	3,7V/660mAh	BDP-PELI63	B117	59327
Pentax	Optio M60	3,7V/680mAh	BDP-PELI78	B119	59329
Pentax	Optio M85	3,7V/820 mAh	BDP-PELI95		
Pentax	Optio M90	3,7V/740mAh	BDP-LI40B/42B	B32	59230
Pentax	Optio MX	3,7V/1800mAH	BDP-FNP120	B123	59333
Pentax	Optio MX4	3,7V/1800mAH	BDP-FNP120	B123	59333
Pentax	Optio P70	3,7V/925mAh	BDP-PDLI92	B162	59370
Pentax	Optio P80	3,7V/680mAh	BDP-PDLI88	B157	59366
Pentax	Optio RS 1000	3,7V/740mAh	BDP-LI40B/42B	B32	59230
Pentax	Optio RS 1500		not available		

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Pentax	Optio RZ 10	3,7V/925mAh	BDP-PDLI92	B162	59370
Pentax	Optio RZ 18	3,7V/925mAh	BDP-PDLI92	B162	59370
Pentax	Optio S	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio S1	3,7V/680mAh	BDP-PELI78	B119	59329
Pentax	Optio S4	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio S4i	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio S5i	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio S5n	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio S5z	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio S6	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio S7	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio S10	3,7V/1000mAh	BDP-PELI68	B118	59328
Pentax	Optio S12	3,7V/1000mAh	BDP-PELI68	B118	59328
Pentax	Optio S30	AA	NiMH		59287
Pentax	Optio S40	AA	NiMH		59287
Pentax	Optio S45	AA	NiMH		59287
Pentax	Optio S50	AA	NiMH		59287
Pentax	Optio S55	AA	NiMH		59287
Pentax	Optio S60	AA	NiMH		59287
Pentax	Optio SV	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio SVI	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio T10	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio T20	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio T30	3,7V/660mAh	BDP-PELI63	B117	59327
Pentax	Optio V10	3,7V/660mAh	BDP-PELI63	B117	59327
Pentax	Optio V20	3,7V/680mAh	BDP-PELI78	B119	59329
Pentax	Optio W10	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio W20	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio W30	3,7V/660mAh	BDP-PELI63	B117	59327
Pentax	Optio W60	3,7V/680mAh	BDP-PELI78	B119	59329
Pentax	Optio W80	3,7V/680mAh	BDP-PELI78	B119	59329
Pentax	Option W90	3,7V/680mAh	BRAUN-PDLI88	B157	59366
Pentax	Optio WP	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio Wpi	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio WS80	3,7V/680mAh	BDP-PDLI88	B157	59366
Pentax	Optio X	3,7V/750mAh	BDP-FNP40	B10	59209
Pentax	Optio X70	3,7V/925mAh	BDP-PDLI92	B162	59370
Pentax	Optio Z10	3,7V/660mAh	BDP-PELI72	B120	59330
Pentax	WG1,WG2-GPS	3,7V/925mAh	BDP-PDLI92	B162	59370
Praktica	DC 60	AA	NiMH		59287
Praktica	DC 52	3,7V/1100mAh	BDP-FNP60	B12	59211
Praktica	DCZ 5.4	AA	NiMH		59287

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



Praktica	DCZ 5.5	AA	NiMH		59287
Praktica	DCZ 5.8	AA	NiMH		59287
Praktica	DCZ 6.2	AA	NiMH		59287
Praktica	DCZ 6.3	AA	NiMH		59287
Praktica	DCZ 6.8	AA	NiMH		59287
Praktica	DCZ 7.2	AA	NiMH		59287
Praktica	DCZ 7.3	AA	NiMH		59287
Praktica	DCZ 7.4	AA	NiMH		59287
Praktica	DCZ 8.1	AA	NiMH		59287
Praktica	DCZ 8.2	AA	NiMH		59287
Praktica	DCZ 8.3	3,7V/720mAh	BDP-MNP900	B104	59314
Praktica	DCZ 10.1	AA	NiMH		59287
Praktica	DCZ 10.2	AA	NiMH		59287
Praktica	DCZ 10.3	3,7V/750mAh	BDP-FNP40	B10	59209
Praktica	DCZ 10.4	3,7V/720mAh	BDP-MNP900	B104	59314
Praktica	DCZ 12.1	AA	NiMH		59287
Praktica	DCZ 12.Z4	AA	NiMH		59287
Praktica	DCZ 14.1	AA	NiMH		59287
Praktica	Dpix 510Z	AA	NiMH		59287
Praktica	Dpix 530Z	AA	NiMH		59287
Praktica	Dpix 740Z	AA	NiMH		59287
Praktica	DPix 750Z	AA	NiMH		59287
Praktica	Dpix 820Z	AA	NiMH		59287
Praktica	Dpix 910Z	AA	NiMH		59287
Praktica	Dpix 1000Z	AA	NiMH		59287
Praktica	Dpix 1100Z	AA	NiMH		59287
Praktica	Dpix 3200	AAA	BRAUN NiMH 1000		59288
Praktica	Dpix 3300	AAA	BRAUN NiMH 1000		59288
Praktica	Dpix 5000WP	AA	NiMH		59287
Praktica	Dpix 5100	AA	NiMH		59287
Praktica	Dpix 5200	AA	NiMH		59287
Praktica	Dpix 9000	AA	NiMH		59287
Praktica	DVC 5.4FHD	3,7v/1800mAh	BDP-FNP120	B123	59333
Praktica	DVC 5.2FHD	3,7V/1100mAh	BDP-FNP60	B12	59211
Praktica	DVC 5.1HD	3,7v/1800mAh	BDP-FNP120	B123	59333
Praktica	DVC 6.1	3,7V/1100mAh	BDP-FNP60	B12	59211
Praktica	DVC 7.1Z	3,7V/1100mAh	BDP-FNP60	B12	59211
Praktica	HD 11.0i	3,7V/1100mAh	BDP-FNP60	B12	59211
Praktica	luxmedia 4008	AA	NiMH		59287
Praktica	luxmedia 5102	AA	NiMH		59287
Praktica	luxmedia 5103	AA	NiMH		59287
Praktica	luxmedia 5203	AA	NiMH		59287

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Praktica	luxmedia 5303	AA	NiMH		59287
Praktica	luxmedia 6103	AA	NiMH		59287
Praktica	luxmedia 6105	3,7V/1100mAh	BDP-FNP60	B12	59211
Praktica	luxmedia 6403	3,7V/720mAh	BDP-MNP900	B104	59314
Praktica	luxmedia 6503	3,7V/750mAh	BDP-FNP40	B10	59209
Praktica	luxmedia 7103	3,7V/720mAh	BDP-MNP900	B104	59314
Praktica	luxmedia 7203	3,7V/750mAh	BDP-FNP40	B10	59209
Praktica	luxmedia 7303	3,7V/750mAh	BDP-FNP40	B10	59209
Praktica	luxmedia 7403	3,7V/750mAh	BDP-FNP40	B10	59209
Praktica	luxmedia 8003	AA	NiMH		59287
Praktica	luxmedia 8203	3,7V/720mAh	BDP-MNP900	B104	59314
Praktica	luxmedia 8213	3,7V/720mAh	BDP-MNP900	B104	59314
Praktica	luxmedia 8303	3,7V/750mAh	BDP-FNP40	B10	59209
Praktica	luxmedia 8403	3,7V/750mAh	BDP-FNP40	B10	59209
Praktica	luxmedia 8503	3,7V/750mAh	BDP-FNP40	B10	59209
Praktica	luxmedia 10-TS	3,7V/720mAh	BDP-KLIC7001	B25	59223
Praktica	luxmedia 12-03	3,7V/750mAh	BDP-FNP40	B10	59209
Praktica	luxmedia 12-TS	3,7V/720mAh	BDP-KLIC7001	B25	59223
Praktica	luxmedia 12-XS	3,7V/720mAh	BDP-MNP900	B104	59314
Praktica	luxmedia 10-XS	3,7V/720mAh	BDP-MNP900	B104	59314
Praktica	luxmedia 10-X3	AA	NiMH		59287
Praktica	luxmedia 10-03	3,7V/660mAh	BDP-FNP45	B95	59305
Praktica	luxmedia 10-23	3,7V/750mAh	BDP-FNP40	B10	59209
Praktica	luxmedia 12-04	3,7V/660mAh	BDP-FNP45	B95	59305
Praktica	luxmedia 12-04 silber	3,7V/660mAh	BDP-FNP45	B95	59305
Praktica	luxmedia 12-23	3,7V/660mAh	BDP-FNP45	B95	59305
Praktica	luxmedia 12-HD	3,7V/750mAh	BDP-FNP40	B10	59209
Praktica	luxmedia 12-Z4	3,7V/660mAh	BDP-FNP45	B95	59305
Praktica	luxmedia 12-Z4TS	3,7V/660mAh	BDP-FNP45	B95	59305
Praktica	luxmedia 12-Z5	3,7V/660mAh	BDP-FNP45	B95	59305
Praktica	luxmedia 14-Z5	3,7V/660mAh	BDP-FNP45	B95	59305
Praktica	luxmedia 14-Z50S	3,7V/660mAh	BDP-FNP45	B95	59305
Praktica	luxmedia 14-Z51	3,7V/660mAh	BDP-FNP45	B95	59305
Praktica	luxmedia 14-Z80S		not available		
Praktica	luxmedia 16-Z21	AA	NiMH		59287
Praktica	luxmedia 16-Z51	3,7V/660mAh	BDP-FNP45	B95	59305
Praktica	QD 500	AA	NiMH		59287
Praktica	QD 800	AA	NiMH		59287
Praktica	QD 900LCD	AA	NiMH		59287
Ricoh	CX 1	3,7V/1000mAh	BDP-BCE10	B33	59231
Ricoh	CX 2	3,7V/1000mAh	BDP-BCE10	B33	59231
Ricoh	CX 3	3,7V/925mAh	BDP-P-DLI92	B162	59370

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Ricoh	CX 4	3,7V/925mAh	BDP-P-DLI92	B162	59370
Ricoh	CX 5	3,7V/925mAh	BDP-OLI50B	B102	59312
Ricoh	CX 6	3,7V/925mAh	BDP-OLI50B	B102	59312
Ricoh	Caplio 300G	AA	NiMH		59287
Ricoh	Caplio 300G	3,7V/1100mAh	BDP-FNP60	B12	59211
Ricoh	Caplio 300G	3,7V/1800mAh	BDP-FNP120	B123	59333
Ricoh	Caplio 400G Wide	AA	NiMH		59287
Ricoh	Caplio 400G Wide	3,7V/1100mAh	BDP-FNP60	B12	59211
Ricoh	Caplio 400G Wide	3,7V/1800mAh	BDP-FNP120	B123	59333
Ricoh	Caplio 500G	3,7V/1800mAh	BDP-FNP120	B123	59333
Ricoh	Caplio 500G Wide	AA	NiMH		59287
Ricoh	Caplio 500SE	3,7V/1800mAh	BDP-FNP120	B123	59333
Ricoh	Caplio G3	3,7V/1100mAh	BDP-FNP60	B12	59211
Ricoh	Caplio G3	3,7V/1800mAh	BDP-FNP120	B123	59333
Ricoh	Caplio G3S	3,7V/1100mAh	BDP-FNP60	B12	59211
Ricoh	Caplio G3S	3,7V/1800mAh	BDP-FNP120	B123	59333
Ricoh	Caplio G4	3,7V/1100mAh	BDP-FNP60	B12	59211
Ricoh	Caplio G4	3,7V/1800mAh	BDP-FNP120	B123	59333
Ricoh	Caplio G4wide	3,7V/1100mAh	BDP-FNP60	B12	59211
Ricoh	Caplio G4wide	3,7V/1800mAh	BDP-FNP120	B123	59333
Ricoh	Caplio G 600	3,7V/1100mAh	BDP-FNP60	B12	59211
Ricoh	Caplio G 700SE	3,7V/1250mAh	BDP-DLI106	B176	59384
Ricoh	Caplio G 700	3,7V/1250mAh	BDP-DLI106	B176	59384
Ricoh	Ricoh GR Digital	3,7V/1150mAh	BDP-FNP70	B15	59213
Ricoh	Ricoh GR Digital II	3,7V/1150mAh	BDP-FNP70	B15	59213
Ricoh	Ricoh GR Digital III	AAA	BRAUN NiMH 1000		59288
Ricoh	Caplio GX	AA	NiMH		59287
Ricoh	Caplio GX	3,7V/1800mAh	BDP-FNP120	B123	59333
Ricoh	Caplio GX8	AA	NiMH		59287
Ricoh	Caplio GX8	3,7V/1800mAh	BDP-FNP120	B123	59333
Ricoh	Caplio GX100	AA	NiMH		59287
Ricoh	Caplio GX 200	3,7V/1100mAh	BDP-FNP60	B12	59211
Ricoh	Caplio Pro G3	3,7V/1800mAh	BDP-FNP120	B123	59333
Ricoh	Caplio R1	AA	NiMH		59287
Ricoh	Caplio R1V	AA	NiMH		59287
Ricoh	Caplio R2	AA	NiMH		59287
Ricoh	Caplio R3	3,7V/1150mAh	BDP-S005E	B39	59237
Ricoh	Caplio R4	3,7V/1150mAh	BDP-S005E	B39	59237
Ricoh	Caplio R5	3,7V/1150mAh	BDP-S005E	B39	59237
Ricoh	Caplio R6	3,7V/1000mAh	BDP-BCE10	B33	59231
Ricoh	Caplio R7	3,7V/1000mAh	BDP-BCE10	B33	59231
Ricoh	Caplio R8	3,7V/1000mAh	BDP-BCE10	B33	59231

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE

Ricoh	Caplio R10	3,7V/1000mAh	BDP-BCE10	B33	59231
Ricoh	Caplio R30	3,7V/1150mAh	BDP-S005E	B39	59237
Ricoh	Caplio R50	3,7V/680mAh	BDP-PELI78	B119	59329
Ricoh	Caplio RR10	3,7V/1100mAh	BDP-FNP60	B12	59211
Ricoh	Caplio RR10	3,7V/1800mAh	BDP-FNP120	B123	59333
Ricoh	Caplio RR30	3,7V/1100mAh	BDP-FNP60	B12	59211
Ricoh	Caplio RR30	3,7V/1800mAh	BDP-FNP120	B123	59333
Ricoh	Caplio RR230	AA	NiMH		59287
Ricoh	GXR		not available		
Ricoh	Caplio RR330	AA	NiMH		59287
Ricoh	Caplio RR330	3,7V/1800mAh	BDP-FNP120	B123	59333
Ricoh	Caplio RR530	AA	NiMH		59287
Ricoh	Caplio RR630	AA	NiMH		59287
Ricoh	Caplio RR660	AA	NiMH		59287
Ricoh	Caplio RR730	AA	NiMH		59287
Ricoh	Caplio RR750	AA	NiMH		59287
Ricoh	Caplio RR770	AA	NiMH		59287
Ricoh	Caplio RX	AA	NiMH		59287
Ricoh	Caplio RX	3,7V/1800mAh	BDP-FNP120	B123	59333
Ricoh	Caplio RZ1	AA	NiMH		59287
Ricoh	GR Digital IV		not available		
Ricoh	Ricoh 500SE	AA	NiMH		59287
Ricoh	PX	3,7V/925mAh	BDP-OLI50B	B102	59312
Rollei	Compactline 150	3,7V/1100mAh	BDP-FNP60	B12	59211
Rollei	Compactline 100	AA	NiMH		59287
Rollei	Compactline 80	AA	NiMH		59287
Rollei	Compactline 102		not available		
Rollei	Compactline 103		not available		
Rollei	Compactline 110		not available		
Rollei	Compactline 122		not available		
Rollei	Compactline 122		not available		
Rollei	Compactline 200		not available		
Rollei	Compactline 202		not available		
Rollei	Compactline 203		not available		
Rollei	Compactline 312		not available		
Rollei	Compactline 320		not available		
Rollei	Compactline 350		not available		
Rollei	Compactline 360TS		not available		
Rollei	Compactline 370TS		not available		
Rollei	Compactline 390SE		not available		
Rollei	Compactline 412		not available		
Rollei	Powerflex 3D		not available		

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



Rollei	Powerflex 440		not available		
Rollei	Powerflex 450		not available		
Rollei	Powerflex 455		not available		
Rollei	Powerflex 460		not available		
Rollei	Powerflex 470		not available		
Rollei	RCP-6324	AA	NiMH		59287
Rollei	RCP-7324	AA	NiMH		59287
Rollei	RCP-7325XS	AA	NiMH		59287
Rollei	RCP-7330X	AA	NiMH		59287
Rollei	RCP-7430XW	3,7V/1100mAh	BDP-FNP60	B12	59211
Rollei	RCP-8325	3,7V/1100mAh	BDP-FNP60	B12	59211
Rollei	RCP-8325X	3,7V/1100mAh	BDP-FNP60	B12	59211
Rollei	RCP-8330X	AA	NiMH		59287
Rollei	RCP-8427XW	3,7V/1100mAh	BDP-FNP60	B12	59211
Rollei	RCP-10325X	3,7V/1100mAh	BDP-FNP60	B12	59211
Rollei	RCP-S8	AA	NiMH		59287
Rollei	RCP-S10	AA	NiMH		59287
Rollei	Sportsline 60	AA	NiMH		59287
Rollei	X8	AA	NiMH		59287
Samsung	D60	AA	NiMH		59287
Samsung	D70	AA	NiMH		59287
Samsung	D75	AA	NiMH		59287
Samsung	D860	AA	NiMH		59287
Samsung	ES-15	AA	NiMH		59287
Samsung	ES-20	AA	NiMH		59287
Samsung	ES-30	AA	NiMH		59287
Samsung	ES-55	3,7V/1050mAh	BDP -SLB10A	B98	59308
Samsung	ES-60	3,7V/1050mAh	BDP -SLB10A	B98	59308
Samsung	ES-65	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	ES-70	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	ES-75	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	ES-80	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	EX1	3,8V/1150 mAh	BDP-SLB11A	B170	59378
Samsung	GX 10	7,4V/1300mAh	BDP-PLi50	B91	59301
Samsung	GX-1S	AA	NiMH		59287
Samsung	GX-1L	AA	NiMH		59287
Samsung	GX20	7,4V/1300mAh	BDP-PLi50	B91	59301
Samsung	Pro815	7,4V/1900mAh	BDP-SLB1974	B50	59248
Samsung	Digimax i5	3,7V/820mAh	BDP-SLB0837	B41	59239
Samsung	Digimax i6 PMP	3,7V/820mAh	BDP-SLB0837	B41	59239
Samsung	i7	3,7V/750mAh	SLB-1137C		
Samsung	i8	3,7V/750mAh	BDP-SLB0937	B89	59298

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Samsung	Digimax i50	3,7V/820mAh	BDP-SLB0837	B41	59239
Samsung	i70	3,7V/820mAh	BDP-SLB0837	B41	59239
Samsung	Digimax i73	3,7V/1100mAh	BDP-FNP60	B12	59211
Samsung	Digimax i74wide	3,7V/1100mAh	BDP-FNP60	B12	59211
Samsung	Digimax i85	3,7V/1100mAh	BDP-SLB1137D	B99	59309
Samsung	IT-100	3,7V/1050mAh	BDP -SLB10A	B98	59308
Samsung	Digimax L50	3,7V/820mAh	BDP-SLB0837	B41	59239
Samsung	Digimax L55	3,7V/820mAh	BDP-SLB0837	B41	59239
Samsung	Digimax L60	3,7V/820mAh	BDP-SLB0837	B41	59239
Samsung	L73	3,7V/820mAh	BDP-SLB0837	B41	59239
Samsung	L74 Wide	3,7V/1100mAh	BDP-FNP60	B12	59211
Samsung	L77	3,7v/800mAh	BDP-SLB0837B	B92	59302
Samsung	L 83T	3,7V/820mAh	BDP-SLB0837	B41	59239
Samsung	Digimax L85	3,7V/1230mAh	BDP-SLB1237	B49	59247
Samsung	L100	3,7V/1050mAh	BDP-SLB10A	B98	59308
Samsung	L110	3,7V/1050mAh	BDP-SLB10A	B98	59308
Samsung	L200	3,7V/1050mAh	BDP-SLB10A	B98	59308
Samsung	L201	3,7v/800mAh	BDP-SLB0837B	B92	59302
Samsung	L210	3,7V/1050mAh	BDP-SLB10A	B98	59308
Samsung	L310W	3,7V/1050mAh	BDP-SLB10A	B98	59308
Samsung	L700	3,7V/820mAh	BDP-SLB0837	B41	59239
Samsung	L730	3,7V/750mAh	BDP-SLB0937	B89	59298
Samsung	L830	3,7V/750mAh	BDP-SLB0937	B89	59298
Samsung	M100	3,7V/1050mAh	BDP-SLB10A	B98	59308
Samsung	MV800		not available		
Samsung	Digimax MP3	3,7V/820mAh	BDP-SLB0837	B41	59239
Samsung	NV3	3,7V/820mAh	BDP-SLB0837	B41	59239
Samsung	NV3 Special Ed.	3,7V/820mAh	BDP-SLB0837	B41	59239
Samsung	NV4	3,7V/750mAh	BDP-SLB0937	B89	59298
Samsung	NV7 OPS	3,7V/820mAh	BDP-SLB0837	B41	59239
Samsung	NV8	3,7V/820mAh	BDP-SLB0837	B41	59239
Samsung	NV 9	3,7V/1050mAh	BDP-SLB10A	B98	59308
Samsung	NV10	3,7V/820mAh	BDP-SLB0837	B41	59239
Samsung	NV 11	3,7V/1100mAh	BDP-FNP60	B12	59211
Samsung	NV 15	3,7V/1100mAh	BDP-FNP60	B12	59211
Samsung	NV 20	3,7V/1100mAh	BDP-FNP60	B12	59211
Samsung	NV24HD	3,7V/1100mAh	BDP-SLB1137D	B99	59309
Samsung	NV30	3,7V/1100mAh	BDP-SLB1137D	B99	59309
Samsung	NV40	3,7V/1100mAh	BDP-SLB1137D	B99	59309
Samsung	NV 100HD	3,7V/1100mAh	BDP-SLB1137D	B99	59309
Samsung	NX5		not available		
Samsung	NX10		not available		

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE

Samsung	NX11				not available
Samsung	NX100				not available
Samsung	NX200				not available
Samsung	PL-20	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	PL-50	3,7V/1050mAh	BDP -SLB10A	B98	59308
Samsung	PL-51	3,7V/1050mAh	BDP -SLB10A	B98	59308
Samsung	PL55	3,7V/1050mAh	BDP -SLB10A	B98	59308
Samsung	PL-60	3,7V/1050mAh	BDP -SLB10A	B98	59308
Samsung	PL-65	3,7V/1050mAh	BDP -SLB10A	B98	59308
Samsung	PL-70	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	PL-80	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	PL-90	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	PL-100	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	PL-120	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	PL-150	3,7V/720mAh	BDP-SLB07A	B168	59376
Samsung	PL-170	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	PL-200	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	S83	AA	NiMH		59287
Samsung	S85	AA	NiMH		59287
Samsung	S630	AA	NiMH		59287
Samsung	S730	AA	NiMH		59287
Samsung	S750	AA	NiMH		59287
Samsung	S760	AA	NiMH		59287
Samsung	S850	AA	NiMH		59287
Samsung	S860	AA	NiMH		59287
Samsung	S1050	AA	NiMH		59287
Samsung	S1060	AA	NiMH		59287
Samsung	S 1070	AA	NiMH		59287
Samsung	ST-30	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	ST -45	3,7V/720mAh	BDP-SLB07A	B168	59376
Samsung	ST-50	3,7V/720mAh	BDP-SLB07A	B168	59376
Samsung	ST-60	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	ST-65	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	ST-70	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	ST-80	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	ST-90	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	ST-95	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	ST-500	3,7V/720mAh	BDP-SLB07A	B168	59376
Samsung	ST-550	3,7V/720mAh	BDP-SLB07A	B168	59376
Samsung	ST-600	3,7V/720mAh	BDP-SLB07A	B168	59376
Samsung	ST-700	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	ST-1000	3,8V/1150 mAh	BDP-SLB11A	B170	59378

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Samsung	ST-5000	3,8V/1150 mAh	BDP-SLB11A	B170	59378
Samsung	ST-5500	3,8V/1150 mAh	BDP-SLB11A	B170	59378
Samsung	ST-6500	3,7V/670mAh	BDP-SPB70A	B171	59379
Samsung	Digimax S500	AA	NiMH		59287
Samsung	Digimax S600	AA	NiMH		59287
Samsung	Digimax S700	AA	NiMH		59287
Samsung	Digimax S800	AA	NiMH		59287
Samsung	Digimax S1000	AA	NiMH		59287
Samsung	Digimax UC-A3	3,7V/1100mAh	BDP-FNP60	B12	59211
Samsung	WB-500	3,7V/1050mAh	BDP -SLB10A	B98	59308
Samsung	WB-550	3,7V/1050mAh	BDP -SLB10A	B98	59308
Samsung	WB-600	3,8V/1150 mAh	BDP-SLB11A	B170	59378
Samsung	WB-650	3,8V/1150 mAh	BDP-SLB11A	B170	59378
Samsung	WB-700	3,8V/1150 mAh	BDP-SLB11A	B170	59378
Samsung	WB-750	3,7V/1050mAh	BDP -SLB10A	B98	59308
Samsung	WB-1000	3,8V/1150 mAh	BDP-SLB11A	B170	59378
Samsung	WB-2000	3,8V/1150 mAh	BDP-SLB11A	B170	59378
Samsung	WB-5000	3,8V/1150 mAh	BDP-SLB11A	B170	59378
Samsung	WB-5500	3,8V/1150 mAh	BDP-SLB11A	B170	59378
Samsung	WP-10	3,7V/670mAh	BDP-SPB70A	B171	59379
Sanyo	XACTI VPC-A5	3,7V/660mAh	BDP-PELI72	B120	59330
Sanyo	VPC-AZ3EX	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Sanyo	VPC-HD700	3,7V/1000mAh	BDP-DBL40	B136	59344
Sanyo	VPC-J1	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Sanyo	VPC-S1414	AA	NiMH		59287
Sanyo	VPC-T1495		not available		
Sanyo	XACTI DMX-HD1	3,7V/1000mAh	BDP-DBL40	B136	59344
Sanyo	XACTI DMX-HD1A	3,7V/1000mAh	BDP-DBL40	B136	59344
Sanyo	Xacti DMX-HD2	3,7V/1000mAh	BDP-DBL40	B136	59344
Sanyo	Xacti DMX-HD800	3,7V/1000mAh	BDP-DBL40	B136	59344
Sanyo	Xacti HD-1	3,7V/1000mAh	BDP-DBL40	B136	59344
Sanyo	XACTI VPC-C6	3,7V/720mAh	BDP-DBL20	B51	59249
Sanyo	XACTI VPC-CA9		not available		
Sanyo	XACTI VPC-CA100		not available		
Sanyo	XACTI VPC-CG10		not available		
Sanyo	XACTI VPC-CG20		not available		
Sanyo	XACTI VPC-CG21		not available		
Sanyo	XACTI VPC-CG100		not available		
Sanyo	XACTI VPC-CS1		not available		
Sanyo	XACTI VPC-E6	3,7V/720mAh	BDP-DBL20	B51	59249
Sanyo	XACTI VPC-E7	3,7V/720mAh	BDP-DBL20	B51	59249
Sanyo	XACTI VPC-E7EX	3,7V/720mAh	BDP-DBL20	B51	59249

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Sanyo	XACTI VPC-E10	3,7V/680mAh	BDP-PELI78	B119	59329
Sanyo	XACTI VPC-E60	3,7V/720mAh	BDP-DBL20	B51	59249
Sanyo	XACTI VPC-E875	3,7V/680mAh	BDP-PELI78	B119	59329
Sanyo	XACTI VPC-E1075	3,7V/720mAh	BDP-DBL20	B51	59249
Sanyo	XACTI VPC-E1090	3,7V/750mAh	BDP-FNP40	B10	59209
Sanyo	Xacti VPC-E1403		not available		
Sanyo	Xacti VPC-E1500 TP		not available		
Sanyo	Xacti VPC-FH1	3,7V/1700mAh	BDP-DB-L50	B137	59345
Sanyo	Xacti VPC-GH1		not available		
Sanyo	Xacti VPC-GH3		not available		
Sanyo	XACTI VPC-HD1	3,7V/1000mAh	BDP-DBL40	B136	59344
Sanyo	XACTI VPC-HD1A	3,7V/1000mAh	BDP-DBL40	B136	59344
Sanyo	XACTI VPC-HD2000	3,7V/1700mAh	BDP-DB-L50	B137	59345
Sanyo	XACTI VPC-HD2000A	3,7V/1700mAh	BDP-DB-L50	B137	59345
Sanyo	XACTI VPC-H1EX	3,7V/1000mAh	BDP-DBL40	B136	59344
Sanyo	XACTI VPC-HD2	3,7V/1000mAh	BDP-DBL40	B136	59344
Sanyo	XACTI VPC-J1/2	3,7V/1100mAh	BDP-LI10B/12B	B30	59228
Sanyo	XACTI VPC-J4EX	3,7V/720mAh	BDP-DBL20	B51	59249
Sanyo	XACTI VPC-PD1		not available		
Sanyo	XACTI VPC-S4	AA	NiMH		59287
Sanyo	XACTI VPC-S5	AA	NiMH		59287
Sanyo	XACTI VPC-S6	AA	NiMH		59287
Sanyo	XACTI VPC-S7	AA	NiMH		59287
Sanyo	XACTI VPC-S50	AA	NiMH		59287
Sanyo	XACTI VPC-S60	AA	NiMH		59287
Sanyo	XACTI VPC-S70	AA	NiMH		59287
Sanyo	XACTI VPC-S122	AA	NiMH		59287
Sanyo	XACTI VPC-S760	AA	NiMH		59287
Sanyo	XACTI VPC-S870	AA	NiMH		59287
Sanyo	XACTI VPC-S1070	AA	NiMH		59287
Sanyo	XACTI VPC-S1275	AA	NiMH		59287
Sanyo	XACTI VPC-SH1		not available		
Sanyo	XACTI VPC-WH1		not available		
Sanyo	XACTI VPC-X1200	3,7V/680mAh	BDP-SDBL80	B153	59361
Sanyo	XACTI VPC-X1220	3,7V/680mAh	BDP-SDBL80	B153	59361
Sanyo	XACTI VPC-X1420	3,7V/680mAh	BDP-SDBL80	B153	59361
Sony	A65V	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	A77V	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-Alpha 35	7,4V/1000mAh	BDP-SFW50	B182	59391
Sony	DSLR-Alpha 77	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-Alpha 100	7,2V/1620mAh	BDP-NPFM55H	B52	59250
Sony	DSLR-Alpha 100H	7,2V/1620mAh	BDP-NPFM55H	B52	59250

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Sony	DSLR-Alpha 100K	7,2V/1620mAh	BDP-NPFM55H	B52	59250
Sony	DSLR-Alpha 100W	7,2V/1620mAh	BDP-NPFM55H	B52	59250
Sony	DSLR-Alpha 200	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-Alpha 200K	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-Alpha 200W	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-A230/290L	7,4V/650mAh	BDP-SFH50N	B138	59346
Sony	DSLR-Alpha 300X	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-Alpha 300K	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-Alpha 300	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-A330	7,4V/650mAh	BDP-SFH50N	B138	59346
Sony	DSLR-Alpha 350X	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-Alpha 350K	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-Alpha 350	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-A380/390L	7,4V/650mAh	BDP-SFH50N	B138	59346
Sony	DSLR-A450	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-A500	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-A550	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-A560	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-A580	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-Alpha 700P	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-Alpha 700K	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-Alpha 700	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-A850	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSLR-A900	7,4V/1400mAh	BDP-SFM500H	B100	59310
Sony	DSC-G1	3,6V/1100mAh	BDP-FR1	B31	59229
Sony	DSC-H3	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-H7	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-H9	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-H10	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-H20	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-H50	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-H55	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-H70	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-HX1	7,4V/650mAh	BDP-SFH50N	B138	59346
Sony	DSC-HX5V	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-HX7V	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-HX9V	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-HX100V	7,4V/650mAh	BDP-SFH50N	B138	59346
Sony	DSC-M2	3,6V/710mAh	BDP-FT1	B46	59244
Sony	DSC-N1	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-N2	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-P100	3,6V/1100mAh	BDP-FR1	B31	59229

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



Sony	DSC-P150	3,6V/1100mAh	BDP-FR1	B31	59229
Sony	DSC-P200	3,6V/1100mAh	BDP-FR1	B31	59229
Sony	DSC-L1	3,6V/710mAh	BDP-FT1	B46	59244
Sony	DSC-S500	AA	NiMH		59287
Sony	DSC-S600	AA	NiMH		59287
Sony	DSC-S650	AA	NiMH		59287
Sony	DSC-S730	AA	NiMH		59287
Sony	DSC-S750	3,7V/970mAh	BDP-SBK1	B142	59350
Sony	DSC-S800	AA	NiMH		59287
Sony	DSC-S930	AA	BRAUN Alkaline Batterien		59287
Sony	DSC-S950	3,7V/970mAh	BDP-SBK1	B142	59350
Sony	DSC-S980	3,7V/970mAh	BDP-SBK1	B142	59350
Sony	DSC-S2000	AA	NiMH		59287
Sony	DSC-S2100	AA	NiMH		59287
Sony	DSC-T1	3,6V/710mAh	BDP-FT1	B46	59244
Sony	DSC-T2	3,7V/1000mAh	BDP-BD1	B86	59295
Sony	DSC-T3	3,6V/710mAh	BDP-FT1	B46	59244
Sony	DSC-T5	3,6V/710mAh	BDP-FT1	B46	59244
Sony	DSC-T7	3,6V/450mAh	BDP-FE1	B44	59242
Sony	DSC-T9	3,6V/710mAh	BDP-FT1	B46	59244
Sony	DSC-T10	3,6V/710mAh	BDP-FT1	B46	59244
Sony	DSC-T20	3,6V/960mAh	BDP-BG1	B47	59245
Sony	Alpha NEX-3		not available		
Sony	Alpha NEX-5	7,4V/1000mAh	BDP-SFW50	B182	59391
Sony	Alpha NEX-7	7,4V/1000mAh	BDP-SFW50	B182	59391
Sony	Alpha NEX-C3	7,4V/1000mAh	BDP-SFW50	B182	59391
Sony	DSC-T30	3,6V/1100mAh	BDP-FR1	B31	59229
Sony	DSC-T33	3,6V/710mAh	BDP-FT1	B46	59244
Sony	DSC-T50	3,6V/1100mAh	BDP-FR1	B31	59229
Sony	DSC-T70	3,7V/1000mAh	BDP-BD1	B86	59295
Sony	DSC-T77	3,7V/1000mAh	BDP-BD1	B86	59295
Sony	DSC-T90	3,7V/1000mAh	BDP-BD1	B86	59295
Sony	DSC-T99		not available		
Sony	DSC-T100	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-T110	3,7V/600mAh	BDP-NP-BN1	B177	59386
Sony	DSC-T200	3,7V/1000mAh	BDP-BD1	B86	59295
Sony	DSC-T300	3,7V/1000mAh	BDP-BD1	B86	59295
Sony	DSC-T500	3,7V/1000mAh	BDP-BD1	B86	59295
Sony	DSC-T700	3,7V/1000mAh	BDP-BD1	B86	59295
Sony	DSC-T900	3,7V/1000mAh	BDP-BD1	B86	59295
Sony	DSC-TX1	3,7V/1000mAh	BDP-BD1	B86	59295
Sony	DSC-TX5	3,7V/600mAh	BDP-NP-BN1	B177	59386

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE

Sony	DSC-TX7	3,7V/600mAh	BDP-NP-BN1	B177	59386
Sony	DCS-TX9		not available		
Sony	DCS-TX55		not available		
Sony	DCS-TX99		not available		
Sony	DCS-TX10	3,7V/600mAh	BDP-NP-BN1	B177	59386
Sony	DCS-TX110	3,7V/600mAh	BDP-NP-BN1	B177	59386
Sony	DCS-TX100V	3,7V/600mAh	BDP-NP-BN1	B177	59386
Sony	DSC-V3	3,6V/1100mAh	BDP-FR1	B31	59229
Sony	DSC-W30	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W35	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W50	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W55	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W70	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W370	3,7V/970mAh	BDP-SBK1	B142	59350
Sony	DSC-W80	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W80HDPR	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W90	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W100	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W110	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W120	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W130	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W150	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W170	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W180	3,7V/970mAh	BDP-SBK1	B142	59350
Sony	DSC-W190	3,7V/970mAh	BDP-SBK1	B142	59350
Sony	DSC-W200	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W210	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W215	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W220	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W230	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W270	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W275	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W290	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W300	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-W310	3,7V/600mAh	BDP-NP-BN1	B177	59386
Sony	DSC-W320	3,7V/600mAh	BDP-NP-BN1	B177	59386
Sony	DSC-W330	3,7V/600mAh	BDP-NP-BN1	B177	59386
Sony	DSC-W350	3,7V/600mAh	BDP-NP-BN1	B177	59386
Sony	DSC-W360	3,7V/600mAh	BDP-NP-BN1	B177	59386
Sony	DSC-W370	3,7V/600mAh	BDP-NP-BN1	B177	59386
Sony	DSC-W380	3,7V/600mAh	BDP-NP-BN1	B177	59386
Sony	DSC-W390	3,7V/600mAh	BDP-NP-BN1	B177	59386

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



Sony	DSC-W510	3,7V/600mAh	BDP-NP-BN1	B177	59386
Sony	DSC-W530	3,7V/600mAh	BDP-NP-BN1	B177	59386
Sony	DSC-W570	3,7V/600mAh	BDP-NP-BN1	B177	59386
Sony	DSC-WX1	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-WX5		not available		
Sony	DSC-WX7	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-WX10	3,6V/960mAh	BDP-BG1	B47	59245
Sony	DSC-5650	AA	NiMH		59287
Sony	DSC-5800	AA	NiMH		59287
Sony	MHS-TS20K		not available		
Sony	MHS-PM5K		not available		
Sony	MHS-PM5		not available		
Sony	MHS-CM5		not available		
Sony	SLT-Alpha33		not available/NP-FW50		
Sony	SLT-Alpha55		not available/NP-FW50		
Traveler	D-1	AA	NiMH		59287
Traveler	DC 5	AA	NiMH		59287
Traveler	DC12	AA	NiMH		59287
Traveler	DC120	AA	NiMH		59287
Traveler	DC140	AA	NiMH		59287
Traveler	DC 3000	AA	NiMH		59287
Traveler	DC 4000	AA	NiMH		59287
Traveler	DC 4300	AA	NiMH		59287
Traveler	DC 5080	3,7V/720mAh	BDP-MNP900	B104	59314
Traveler	DC 5300	3,7V/1100mAh	BDP-FNP60	B12	59211
Traveler	DC 5600	AA	NiMH		59287
Traveler	DC 6300	3,7V/1100mAh	BDP-FNP60	B12	59211
Traveler	DC 6800	AA	NiMH		59287
Traveler	DC 6900	AA	NiMH		59287
Traveler	DC 7900	AA	NiMH		59287
Traveler	DC8300	3,7V/1100mAh	BDP-CNP40	B53	59251
Traveler	DC 8500	3,7V/1100mAh	BDP-CNP40	B53	59251
Traveler	DC 8600	3,7V/1100mAh	BDP-CNP40	B53	59251
Traveler	DC-X5	3,7V/1100mAh	BDP-CNP40	B53	59251
Traveler	DC-XZ6	3,7V/1100mAh	BDP-CNP40	B53	59251
Traveler	FX5	AA	NiMH		59287
Traveler	HD-10X	3,7V/1100mAh	BDP-FNP60	B12	59211
Traveler	Happy Smile	AA	NiMH		59287
Traveler	IS12		not available		
Traveler	MD21X	3,7V/1100mAh	BDP-FNP60	B12	59211
Traveler	MD41856	3,7V/1100mAh	BDP-FNP60	B12	59211
Traveler	MD85146	3,7V/1100mAh	BDP-FNP60	B12	59211

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Traveler	MD45416	3,7V/1100mAh	BDP-CNP40	B53	59251
Traveler	SW12		not available		
Traveler	Slimline X 4	3,7V/720mAh	BDP-MNP900	B104	59314
Traveler	Slimline X 5	3,7V/720mAh	BDP-MNP900	B104	59314
Traveler	Super Slim X8	3,7V/740mAh	BDP-EN-EL10	B48	59246
Traveler	Super Slim XS8	3,7V/740mAh	BDP-EN-EL10	B48	59246
Traveler	Super Slim XS10	3,7V/740mAh	BDP-EN-EL10	B48	59246
Traveler	Super Slim XS70	3,7V/740mAh	BDP-EN-EL10	B48	59246
Traveler	Super Slim XS80	3,7V/740mAh	BDP-EN-EL10	B48	59246
Traveler	UW 8	3,7V/740mAh	BDP-EN-EL10	B48	59246
Traveler	Slimline X 6	3,7V/720mAh	BDP-MNP900	B104	59314
Traveler	SX 330z	AA	NiMH		59287
Traveler	SX 410z	AA	NiMH		59287
Traveler	Touch One		not available		
Traveler	XS4	3,7V/740mAh	BDP-EN-EL10	B48	59246
Traveler	XS 7	3,7V/720mAh	BDP-MNP900	B104	59314
Traveler	XS 12		not available		
Traveler	XS 400		not available		
Traveler	XS 4000		not available		
Toshiba	PDR-2	CR123			
Toshiba	PDR-5	CR123			
Toshiba	PDR-2300	AA	NiMH		59287
Toshiba	PDR-3300	AA	NiMH		59287
Toshiba	PDR-5300	3,7V/1100mAh	BDP-FNP60	B12	59211
Toshiba	PDR-M1	AA	NiMH		59287
Toshiba	PDR-M3	3,7V/2000mAh	BDP-FNP100	B122	59332
Toshiba	PDR-M4	3,7V/1400mAh	BDP-FNP80	B121	59331
Toshiba	PDR-M5	3,7V/1400mAh	BDP-FNP80	B121	59331
Toshiba	PDR-M25	AA	NiMH		59287
Toshiba	PDR-M60	AA	NiMH		59287
Toshiba	PDR-M61	AA	NiMH		59287
Toshiba	PDR-M65	AA	NiMH		59287
Toshiba	PDR-M70	3,7V/1400mAh	BDP-FNP80	B121	59331
Toshiba	PDR-M71	AA	NiMH		59287
Toshiba	PDR-M81	AA	NiMH		59287
Toshiba	PDR-M700	AA	NiMH		59287
Toshiba	PDR-T10	AA	NiMH		59287
Toshiba	PDR-T20	3,7V/1100mAh	BDP-FNP60	B12	59211
Toshiba	PDR-T30	3,7V/1100mAh	BDP-FNP60	B12	59211
Toshiba	Camileo BW10		not available		
Toshiba	Camileo Pro	3,7V/1100mAh	BDP-FNP60	B12	59211
Yakumo	Mega Image 34	3,7V/1100mAh	BDP-FNP60	B12	59211

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



Yakumo	Mega Imoge 35	AA	NiMH		59287
Yakumo	Mega Image 37	3,7V/1100mAh	BDP-FNP60	B12	59211
Yakumo	Mega Image 45	AA	NiMH		59287
Yakumo	Mega Image 47	3,7V/1100mAh	BDP-FNP60	B12	59211
Yakumo	Mega Image 47SL	AA	NiMH		59287
Yakumo	Mega Image 47SX	AA	NiMH		59287
Yakumo	Mega Image 55CX	AA	NiMH		59287
Yakumo	Mega Image 57	AA	NiMH		59287
Yakumo	Mega Image 57X	AA	NiMH		59287
Yakumo	Mega Image 67X	AA	NiMH		59287
Yakumo	Mega Image 84D	AA	NiMH		59287
Yakumo	Mega Image 85D	AA	NiMH		59287
Yakumo	Mega Image 410	AA	NiMH		59287
Yakumo	Mega Image 610X	AA	NiMH		59287
Yakumo	Mega Image 811X	3,7V/1100mAh	BDP-FNP60	B12	59211
Yakumo	Mega Image IV	AA	NiMH		59287
Yakumo	Mega Image VI	AA	NiMH		59287
Yakumo	Mega Image VII	AA	NiMH		59287
Yakumo	Mega Image X	AA	NiMH		59287
Yakumo	Mega Image XL	AA	NiMH		59287
Yakumo	Mage Image XS	AA	NiMH		59287