

YHTEENSOPIVUUSLISTA AKUT VIDEOKAMEROILLE 25.11.2011



ED-MARK Oy
Vilhonvuorenkatu 11A
00500 HELSINKI

Puh: 09-682 2420
Faksi: 09-09-682 2804

www.ed-mark.fi

BATTERY - REFERENCE - LIST 25.11.2.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

Merkki	Malli	Teho	Tyyppi	T.2	T.3	BRAUN T.nro
CANON	C2	7,4V/750mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	DC 10	7,4V/800mAh	BDP-CBP-208	B 59	BP-208	59257
CANON	DC 20	7,4V/800mAh	BDP-CBP-208	B 59	BP-208	59257
CANON	DC 50	7,4V/1300mAh	BDP-CBP-214	B 141	BP-214	59349
CANON	DC 51	7,4V/1300mAh	BDP-CBP-214	B 141	BP-214	59349
CANON	DC210	7,4V/800mAh	BDP-CBP-208	B 59	BP-208	59257
CANON	DC220	7,4V/800mAh	BDP-CBP-208	B 59	BP-208	59257
CANON	DC230	7,4V/800mAh	BDP-CBP-208	B 59	BP-208	59257
CANON	DC301	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	DC310	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	DC310	7,4V/2100mAh	BDP-CBP2L24	B 105	BP-2L24H	59315
CANON	DC320	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	DC320	7,4V/2100mAh	BDP-CBP2L24	B 105	BP-2L24H	59315
CANON	DC330	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	DC330	7,4V/2100mAh	BDP-CBP2L24	B 105	BP-2L24H	59315
CANON	DC-410	7,4V/2100mAh	BDP-CBP2L24	B 105	BP-2L24H	59315
CANON	DC-410	7,4V/750mAH	BDP-NB2LH	B 4	BP-NB2LH	59203
CANON	DC-411	7,4V/2100mAh	BDP-CBP2L24	B 105	BP-2L24H	59315
CANON	DC-411	7,4V/750mAH	BDP-NB2LH	B 4	BP-NB2LH	59203
CANON	DC-420	7,4V/2100mAh	BDP-CBP2L24	B 105	BP-2L24H	59315
CANON	DC-420	7,4V/750mAH	BDP-NB2LH	B 4	BP-NB2LH	59203
CANON	E1	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	E2	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	E30	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ELURA	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ELURA 40MC	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ELURA 40MC	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	ELURA 40MC	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	ELURA 50	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ELURA 50	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	ELURA 50	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	ELURA 60	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ELURA 65	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ELURA 70	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ELUAR 80	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ELURA 80	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	ELURA 80	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	ELURA 85	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ELURA 85	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	ELURA 85	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	ELURA 90	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ELURA 90	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	ELURA 90	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	ES-50	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-55	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-60	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-65	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-75	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-300V	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-410V	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-420V	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-520A	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-4000	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-5000	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

CANON	ES-6000	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-6500V	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-7000ES	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-7000V	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-8000V	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-8100H18	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-8100V	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-8200V	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-8400V	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ES-8600	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	FS10	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	FS11	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	FS100	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	FV1	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	FV 40 KIT	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	FV 40 KIT	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	FV 50KIT	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	FV 50KIT	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	FV 300KIT	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	FV 300KIT	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	FV 400	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	FV 400	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	FV 500	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	FV 500	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	FV 500	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	FV M1	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	FV M1	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	FV M10	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	FV M10	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	FV M20	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	FV M30	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	FV M100	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	FV M200	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	HF 10	7,4V/1900mAh	BDP-CBP809	B 107	BP-809	59317
CANON	HF 10	7,4V/3000mAh	BDP-CBP819	B 108	BP-819	59318
CANON	HF 11	7,4V/1900mAh	BDP-CBP809	B 107	BP-809	59317
CANON	HF 11	7,4V/2700mAh	BDP-CBP827	B 149	BP-827	59357
CANON	HF 100	7,4V/1900mAh	BDP-CBP809	B 107	BP-809	59317
CANON	HF 100	7,4V/3000mAh	BDP-CBP819	B 108	BP-819	59318
CANON	HG 10	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	HG 20	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	HG 21	7,4V/1200mAh	BDP-CBP807	B 150	BP-807	59358
CANON	HG 21	7,4V/2700mAh	BDP-CBP827	B 149	BP-827	59357
CANON	HG 30	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	HR-10	7,4V/1300mAh	BDP-CBP-214	B 141	BP-214	59349
CANON	HV 30	7,4V/2100mAh	BDP-2L24	B 105	BP-2L24H	59315
CANON	HV 30	7,4V/1200mAh	BDP-2L13	B 152	BP-2L13	59360
CANON	IVIS DC 50	7,4V/1300mAh	BDP-CBP-214	B 141	BP-214	59349
CANON	IVIS DC300	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	IVIS HF 10	7,4V/1900mAh	BDP-CBP809	B 107	BP-809	59317
CANON	IVIS HF 100	7,4V/1900mAh	BDP-CBP809	B 107	BP-809	59317
CANON	IVIS HG 10	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	IVIS HV 30	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	IXY DV3	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	IXY DV5	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

CANON	IXY DVM3	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	Legria FS-20	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria FS-21	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria FS-22	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria FS-36	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria FS-37	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria FS-46	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria FS-200	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria FS-305	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria FS-306	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria FS-307	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria FS-406	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria HF-G10	7,4V/2700mAh	BDP-CBP827	B 149	BP-827	59357
CANON	Legria HF-S10	7,4V/2700mAh	BDP-CBP827	B 149	BP-827	59357
CANON	Legria HF-S10	7,4V/1200mAh	BDP-CBP807	B 150	BP-807	59358
CANON	Legria HF-S11	7,4V/1200mAh	BDP-CBP807	B 150	BP-807	59358
CANON	Legria HF-S11	7,4V/2700mAh	BDP-CBP827	B 149	BP-827	59357
CANON	Legria HF-S20	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria HF-S21	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria HF-S30	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria HF-S100	7,4V/2700mAh	BDP-CBP827	B 149	BP-827	59357
CANON	Legria HF-S100	7,4V/1200mAh	BDP-CBP807	B 150	BP-807	59358
CANON	Legria HF-S200	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria HF-20	7,4V/2700mAh	BDP-CBP827	B 149	BP-827	59357
CANON	Legria HF-20	7,4V/1900mAh	BDP-CBP809	B 107	BP-809	59317
CANON	Legria HF-21	7,4V/1900mAh	BDP-CBP809	B 107	BP-809	59317
CANON	Legria HF-21	7,4V/2700mAh	BDP-CBP827	B 149	BP-827	59357
CANON	Legria HF-200	7,4V/2700mAh	BDP-CBP827	B 149	BP-827	59357
CANON	Legria HF-200	7,4V/1900mAh	BDP-CBP809	B 107	BP-809	59317
CANON	Legria HF-M31	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria HF-M32	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria HF-M41	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria HF-M46	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria HF-M306	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria HF-M406	7,4V/890mAh	BDP-CBP808	B 109	BP-808	59319
CANON	Legria HV-40	7,4V/1200mAh	BDP-2L13	B 152	BP-2L13	59360
CANON	Legria HV-40	7,4V/2100mAh	BDP-2L24	B 105	BP-2L24H	59315
CANON	Legria HF-R16	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	Legria HF-R17	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	Legria HF-R18	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	Legria HF-R26		not available			
CANON	Legria HF-R28		not available			
CANON	Legria HF-R106	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	Legria HF-R206		not available			
CANON	MD 100	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MD 101	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MD 110	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MD 111	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MD 120	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MD 130	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

CANON	MD 140	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MD 150	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MD 160	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MD 215	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MD 225	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MD 235	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MD 245	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MD 255	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MD 265	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 5	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 5i	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 5iMC	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 6iMC	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 30I	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	MV 30I	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	MV200	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	MV200I	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	MV-300	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	MV-300	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	MV-300I	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	MV-300I	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	MV 400I	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	MV 400I	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	MV 430I	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	MV 430I	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	MV 450I	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	MV 450I	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	MV 600I	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	MV 600I	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	MV 630I	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	MV 630I	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	MV-650I	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	MV-650I	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	MV 790	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 800	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 800	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	MV 800	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	MV 800i	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 830	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 830	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	MV 830	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	MV 830I	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 830I	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	MV 830I	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	MV 850	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	MV 850	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	MV 830I	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	MV 830I	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	MV 850	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	MV 850	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	MV 850I	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV880X	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 880X	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	MV 880X	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

CANON	MV 880XI	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 890	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 900	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 901	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 920	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 930	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 940	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 950	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MV 960	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MVX 1SI	7,4V/800mAh	BDP-CBP-208	B 59	BP-208	59257
CANON	MVX-2I	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	MVX-2I	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	MVX 4I	7,4V/1620mAh	BDP-CBP-308	B 60	BP-308	59258
CANON	MVX 4I	7,4V/1620mAh	BDP-CBP-315	B 61	BP-315	59259
CANON	MVX 20I	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MVX 25I	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MVX 30I	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MVX-30I	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	MVX-30I	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	MVX-35I	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MVX-35I	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	MVX-35I	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	MVX 40	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MVX-40	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	MVX-40	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	MVX 40I	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MVX 45I	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MVX-45I	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	MVX-45I	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	MVX 100I	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	MVX 100I	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	MVX 150I	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	MVX 150I	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	MVX 200	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MVX 200I	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MVX 250I	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MVX 300	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MVX 300	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	MVX 300	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	MVX 330I	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MVX 330I	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	MVX 330I	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	MVX 350I	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	MVX 350I	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	MVX 350I	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	MVXLI	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	MVXLI	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	OPTURA	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	OPTURA 30	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	OPTURA 40	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	OPTURA 50	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	OPTURA 50	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	OPTURA 50	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	OPTURA 60	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	OPTURA 60	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

CANON	OPTURA 60	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	OPTURA 400	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	OPTURA 500	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	OPTURA 600	7,4V/1620mAh	BDP-CBP-308	B 60	BP-308	59258
CANON	OPTURA 600	7,4V/1620mAh	BDP-CBP-315	B 61	BP-315	59259
CANON	OPTURA S1	7,4V/800mAh	BDP-CBP-208	B 59	BP-208	59257
CANON	PI 10MC	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	PI 10MC	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	PI 20MC	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	PI 20MC	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	PI 100MC	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	PI 100MC	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	PRO XL1	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	PRO XL1S	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	PRO XL-H1	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	PRO XL2	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	PRO XM1	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	PRO XM2	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	PRO XV1	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	PRO XV2	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	UC-V10	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	UC-V10HI	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	UC-V20	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	UC-V20HI	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	UC-V30HI	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	UC-V100	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	UC-V200	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	UC-V300	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	UC-X1HI	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	UC-X2	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	UC-X2HI	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	UC-X30HI	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	UC-X40HI	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	UC-X45HI	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	UC-X50	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	UC-X50HI	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	UC-X55HI	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ULTURA	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	V40	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	V40HI	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	V50HI	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	V60HI	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	V65HI	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	V72	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	V75HI	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	V400	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	V420	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	V500	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	VISTURA	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	VIXIA HF 10	7,4V/1900mAh	BDP-CBP809	B 107	BP-809	59317
CANON	VIXIA HF 100	7,4V/1900mAh	BDP-CBP809	B 107	BP-809	59317
CANON	VIXIA HG10	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	VIXIA HV20	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	VIXIA HV30	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	XH-A1	74V/4400mAh	BDP-CBP930	B 110	BP-930	59320

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

CANON	XH-A1	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	XH-A1s	7,4V/4400mAh	BDP-CBP930	B 110	BP-930	59320
CANON	XH-A1s	7,4V/5200mAh	BDP-CBP-950G	B 151	BP-950G	59359
CANON	XH-A1s	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	XF 300		not available			
CANON	XF 305		not available			
CANON	XH-G1	7,4V/4400mAh	BDP-CBP930	B 110	BP-930	59320
CANON	XH-G1	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	XH-G1s	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	XH-G1s	7,4V/5200mAh	BDP-CBP-950G	B 151	BP-950G	59359
CANON	XL-2	7,4V/4400mAh	BDP-CBP930	B 110	BP-930	59320
CANON	XL-H1	7,4V/4400mAh	BDP-CBP930	B 110	BP-930	59320
CANON	XL-H1	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	XL-H1S	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	XL-H1S	7,4V/5200mAh	BDP-CBP-950G	B 151	BP-950G	59359
CANON	XL-HS1	7,4V/4400mAh	BDP-CBP930	B 110	BP-930	59320
CANON	XL-HS1	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	XL-H1A	7,4V/4400mAh	BDP-CBP930	B 110	BP-930	59320
CANON	XL-H1A	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	XM-2	7,4V/4400mAh	BDP-CBP930	B 110	BP-930	59320
CANON	ZR	7,4V/7500mAh	BDP-CBP-970G	B 54	BP-970G	59252
CANON	ZR 25MC	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	ZR 25MC	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	ZR 30MC	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	ZR 30MC	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	ZR 50MC	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	ZR 50MC	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	ZR 50MC10	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	ZR 50MC10	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	ZR 50MC 20	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	ZR 50MC 20	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	ZR 60MC	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	ZR 60MC	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	ZR 65MC	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	ZR 65MC	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	ZR 70MC	7,4V/3240mAh	BDP-CBP-522	B 57	BP-522	59255
CANON	ZR 70MC	7,4V/4860mAh	BDP-CBP-535	B 58	BP-535	59256
CANON	ZR 100	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ZR 100	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	ZR 100	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	ZR 200	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ZR 200	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	ZR 200	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	ZR 300	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ZR 300	7,4V/1500mAh	BDP-CNB2L14	B 56	NB2L-14	59254
CANON	ZR 300	7,4V/2040mAh	BDP-CNB2L22	B 55	NB2L-22	59253
CANON	ZR 400	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ZR 500	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ZR 600	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ZR 700	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ZR 800	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ZR 830	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ZR 850	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ZR 900	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
CANON	ZR 930	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

CANON	ZR 950	7,4V/1500mAh	BDP-CBP2L5	B 106	BP-2L5	59316
JVC	DR-HD1	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	DR-HD1	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GC-WP10		not available			
JVC	GC-FM2		not available			
JVC	GR-D30US	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-D30US	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-D30US	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-D33US	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-D33US	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-D33US	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-D50K	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-D50K	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-D70K	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-D70K	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-D70US	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-D70US	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-D70US	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-D72US	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-D72US	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-D72US	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-D73	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-D90K	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-D90K	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-D90US	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-D90US	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-D90US	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-D93	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-D93US	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-D93US	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-D93US	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-D200US	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-D200US	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-D200US	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-D230	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-D230	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-D230	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-D230US	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-D230US	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-D230US	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-D231	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-D SERIES	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-D SERIES	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-D SERIES	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-D240	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-D240	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-D240	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-D240	7,4V/3300mAh	BDP-BN-VF733	B 67	BN-VF733	59265
JVC	GR-D240EX	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-D240EX	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-D240EX	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-D247	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-D247	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-D247	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-D247	7,4V/3300mAh	BDP-BN-VF733	B 67	BN-VF733	59265

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

JVC	GR-D250	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-D250	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-D250	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-D250	7,4V/3300mAh	BDP-BN-VF733	B 67	BN-VF733	59265
JVC	GR-D250U	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-D250U	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-D250U	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-D250U	7,4V/3300mAh	BDP-BN-VF733	B 67	BN-VF733	59265
JVC	GR-D250US	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-D250US	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-D250US	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-D250US	7,4V/3300mAh	BDP-BN-VF733	B 67	BN-VF733	59265
JVC	GR-D270EX	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-D270EX	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-D270EX	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-D270US	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-D270US	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-D270US	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-D270US	7,4V/3300mAh	BDP-BN-VF733	B 67	BN-VF733	59265
JVC	GR-D271US	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-D271US	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-D271US	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-D271US	7,4V/3300mAh	BDP-BN-VF733	B 67	BN-VF733	59265
JVC	GR-D275US	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-D275US	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-D275US	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-D275US	7,4V/3300mAh	BDP-BN-VF733	B 67	BN-VF733	59265
JVC	GR-D290US	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-D290US	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-D290US	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-D290US	7,4V/3300mAh	BDP-BN-VF733	B 67	BN-VF733	59265
JVC	GR-D295US	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-D295US	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-D295US	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-D295US	7,4V/3300mAh	BDP-BN-VF733	B 67	BN-VF733	59265
JVC	GR-D420EX	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-D420EX	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-D420EX	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-D720 /721	7,4V 2190mAh	BDP-BN-VF823	B166	BN-VF823	59374
JVC	GR-D720 /721	7,4V 2190mAh	BDP-JVCV823	B84	BN-VF823	59292
JVC	GR-D725	7,4V/1620mAh	BDP-JVC815EX	B 83	BN-VF815	59291
JVC	GR-D726/D740	7,4V 2190mAh	BDP-BN-VF823	B166	BN-VF823	59374
JVC	GR-D726/D740	7,4V 2190mAh	BDP-JVCV823	B84	BN-VF823	59292
JVC	GR-D740	7,4V/1620mAh	BDP-JVC815EX	B 83	BN-VF815	59291
JVC	GR-D/750/D760	7,4V 2190mAh	BDP-BN-VF823	B166	BN-VF823	59374
JVC	GR-D/750/D760	7,4V 2190mAh	BDP-JVCV823	B84	BN-VF823	59292
JVC	GR-D770/D796	7,4V 2190mAh	BDP-BN-VF823	B166	BN-VF823	59374
JVC	GR-D770/D796	7,4V 2190mAh	BDP-JVCV823	B84	BN-VF823	59292
JVC	GR-D815	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GR-D815	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59325
JVC	GR-D818	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GR-D818	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59325
JVC	GR-D825	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GR-D825	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59325
JVC	GR-D860	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

JVC	GR-D860	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59325
JVC	GR-D850	7,4V 2190mAh	BDP-BN-VF823	B166	BN-VF823	59374
JVC	GR-D850	7,4V 2190mAh	BDP-JVCV823	B84	BN-VF823	59292
JVC	GR-DA20	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GR-DA20	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59325
JVC	GR-DA30/30 US	7,4V 2190mAh	BDP-BN-VF823	B166	BN-VF823	59374
JVC	GR-DA30/30 US	7,4V 2190mAh	BDP-JVCV823	B84	BN-VF823	59292
JVC	GR-DF SERIES	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-DF SERIES	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-DF SERIES	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-DF420	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-DF420	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-DF420	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-DF540	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-DF540	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-DF540	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-DF565	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-DF565	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-DF565	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-DF590	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-DF590	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-DF590	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-DF590	7,4V/3300mAh	BDP-BN-VF733	B 67	BN-VF733	59265
JVC	GR-DV500US	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DV500US	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DV500US	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR--DV800US	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR--DV800US	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR--DV800US	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DV2000	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DV2000	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DV2000	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DV2000U	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DV2000U	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DV5000	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DV5000	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DV5000	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DVL120U	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DVL120U	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DVL120U	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DVL300U	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DVL300U	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DVL300U	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DVL310	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DVL310	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DVL310	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DVL310U	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DVL310U	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DVL310U	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DVL320U	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DVL320U	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DVL320U	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DVL500U	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DVL500U	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

JVC	GR-DVL500U	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DVL505U	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DVL505U	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DVL505U	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DVL510U	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DVL510U	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DVL510U	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DVL520U	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DVL520U	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DVL520U	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DVL720U	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DVL720U	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DVL720U	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DVL725U	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DVL725U	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DVL725U	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DVL805U	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DVL805U	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DVL805U	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DVL815U	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DVL815U	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DVL815U	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DVL820U	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DVL820U	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DVL820U	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DVL915U	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DVL915U	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DVL915U	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DVL920U	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-DVL920U	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-DVL920U	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-DZ7	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-HD1US	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	GR-HD1US	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-HD1US	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	GR-X5SERIES	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-X5SERIES	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-X5SERIES	7,2V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-X5	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-X5	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-X5	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GR-X5EX	7,2V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	GR-X5EX	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GR-X5EX	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GR-X5EX	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GS-TD1		not available			
JVC	GY-HM100E	7,4V/2190mAh	BDP-JVBN-VF823	B 166	BN-VF823	59374
JVC	GY-HM100E	7,4V 2190mAH	BDP-JVCV823	B84	BN-VF823	59292
JVC	GY-HM 200	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-HD3EX	7,4V/1400mAh	BDP-JVC815EX	B 83	BN-VF815	59303
JVC	GZ-HD3EX	7,4V/1400mAh	BDP-JVC-VF815	B 93	BN-VF815	59303
JVC	GZ-HD5EX	7,4V/1400mAh	BDP-JVC815EX	B 83	BN-VF815	59291
JVC	GZ-HD5EX	7,4V/1400mAh	BDP-JVC-VF815	B 93	BN-VF815	59303
JVC	GZ-HD6EX	7,4V/1400mAh	BDP-JVC815EX	B 83	BN-VF815	59291
JVC	GZ-HD6EX	7,4V/1400mAh	BDP-JVC-VF815	B 93	BN-VF815	59303

BATTERY - REFERENCE - LIST 25.11.2.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

JVC	GZ-HD7EX	7,4V 2190mAh	BDP-BN-VF823	B166	BN-VF823	59374
JVC	GZ-HD7EX	7,4V/1400mAh	BDP-JVC-VF815	B 93	BN-VF815	59303
JVC	GZ-HD10EX	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-HD30EX	7,4V/1400mAh	BDP-JVC-VF815	B 93	BN-VF815	59303
JVC	GZ-HD40EX	7,4V/1400mAh	BDP-JVC-VF815	B 93	BN-VF815	59303
JVC	GZ-HD300EU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-HD300AEU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-HD300REU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-HD300BEU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-HD320BEU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-HM200BEU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-HM1SEU	7,4V/1400mAh	BDP-JVC-VF815	B 93	BN-VF815	59303
JVC	GZ-HD620BEU		not available			
JVC	GZ-HD500SEU		not available			
JVC	GZ-HM200NEU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-HM200B	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-HM400	7,4V/1400mAh	BDP-JVC-VF815	B 93	BN-VF815	59303
JVC	GZ-HM440		not available			
JVC	GZ-HM330 SEU		not available			
JVC	GZ-HM335BEU		not available			
JVC	GZ-HM550BEU		not available			
JVC	GZ-HM400EU	7,4V/1400mAh	BDP-JVC-VF815	B 93	BN-VF815	59303
JVC	GZ-MG20	7,4V/3300mAh	BDP-BN-VF733	B 67	BN-VF733	59265
JVC	GZ-MG30	7,2V/3300mAh	BDP-BN-VF733	B 67	BN-VF733	59265
JVC	GZ-MG40	7,4V/3300mAh	BDP-BN-VF733	B 67	BN-VF733	59265
JVC	GZ-MG50	7,4V/3300mAh	BDP-BN-VF733	B 67	BN-VF733	59265
JVC	GZ-MG40AC	7,4V/700mAh	BDP-BN-VF707	B 65	BN-VF707	59263
JVC	GZ-MG40AC	7,4V/700mAh	BDP-BN-VF707/U	B 65	BN-VF707/U	59263
JVC	GZ-MG40AC	7,4V/1400mAh	BDP-BN-VF714	B 66	BN-VF714	59264
JVC	GZ-MG40AC	7,4V/3300mAh	BDP-BN-VF733	B 67	BN-VF733	59265
JVC	GZ-MG130	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG130	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59235
JVC	GZ-MG135	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG135	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59235
JVC	GZ-MG140	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG140	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59235
JVC	GZ-MG155	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG155	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59235
JVC	GZ-MG255	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG255	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59235
JVC	GZ-MG275	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG275	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59235
JVC	GZ-MG330AEX	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG330AEX	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59235
JVC	GZ-MG750BEU		not available			
JVC	GZ-MG330HEG	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG330HEG	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59235
JVC	GZ-MG610SEU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG330REX	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG330REX	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59235
JVC	GZ-MG331HEG	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG331HEG	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59235
JVC	GZ-MG335HEX	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG335HEX	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59235
JVC	GZ-MG365HEX	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

JVC	GZ-MG365HEX	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59235
JVC	GZ-MG435BEX	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG435BEX	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59235
JVC	GZ-MG465BEX	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG465BEX	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59235
JVC	GZ-MG530EX	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG530EX	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59235
JVC	GZ-MG575	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG575	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59235
JVC	GZ-MG610SEU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG630SEU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG630REU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG630AEU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG645B	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG645BEU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG730EX	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MG730EX	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59338
JVC	GZ-MS90EU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MS100	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MS100	7,4V/750mAh	BDP-JVF808 EX	B 115	BN-VF808	59235
JVC	GZ-MS100BEG	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MS100REG	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MS120AEU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MS120BEU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MS120SEU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-MS130BEU	7,4V/750mAh	BDP-JVF808	B 130	BN-VF808	59338
JVC	GZ-X900		not available			
JVC	VL-100	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	VL-100	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	VL-100	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	VL-105	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	VL-105	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	VL-105	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	VL-107	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	VL-107	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	VL-107	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	VL-108	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	VL-108	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	VL-108	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	VL-109	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	VL-109	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	VL-109	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	VL-200	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	VL-200	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	VL-200	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	VL-205	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	VL-205	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	VL-205	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	VL-300	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	VL-300	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	VL-300	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	VL-305	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	VL-305	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	VL-305	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	VL-307	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

JVC	VL-307	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	VL-307	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	VL-308	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	VL-308	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	VL-308	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	VL-309	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	VL-309	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	VL-309	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	VL-357	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	VL-357	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	VL-357	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	VL-500	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	VL-500	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	VL-500	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	VL-507	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	VL-507	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	VL-507	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	VL-800	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	VL-800	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	VL-800	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
JVC	VL-805	7,4V/1100mAh	BDP-JV-408	B 62	V 408	59260
JVC	VL-805	7,4V/2200mAh	BDP-JV-416	B 63	V 416	59261
JVC	VL-805	7,4V/3240mAh	BDP-JV-428	B 64	V 428	59262
PANASONIC	AG-DVC15	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	AG-DVC15	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	AG-DVC15	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	AG-DVC15	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	D16SE/1B	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	D16SE/1B	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	DZ-MV200A	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	DZ-MV200A	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	DZ-MV200A	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	DZ-MV200A	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	DZ-MV200E	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	DZ-MV200E	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	DZ-MV200E	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	DZ-MV200E	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	DZ-MV208E	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	DZ-MV208E	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	DZ-MV208E	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	DZ-MV208E	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	DZ-MV230A	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	DZ-MV230A	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	DZ-MV230A	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	DZ-MV230A	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	DZ-MV230E	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	DZ-MV230E	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	DZ-MV230E	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	DZ-MV230E	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	DZ-MV250	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	DZ-MV250	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	DZ-MV250	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	DZ-MV250	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	DZ-MV270A	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	DZ-MV270A	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266

BATTERY - REFERENCE - LIST 25.11.2.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

PANASONIC	DZ-MV270A	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	DZ-MV270A	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	DZ-MV270E	7,4V/2200mAh	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	DZ-MV270E	7,4V/2200mAh	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	DZ-MV270E	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	DZ-MV270E	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	HDC-HS9	7,4V/2640mAh	BDP-PVG260	B 111	VW-VBG260	59321
PANASONIC	HDC-HS9	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	HDC-HS20	7,4V/2640mAh	BDP-PVG260	B 111	VW-VBG260	59321
PANASONIC	HDC-HS60		not available			
PANASONIC	HDC-HS80		not available			
PANASONIC	HDC-HS100	7,4V/2640mAh	BDP-PVG260	B 111	VW-VBG260	59321
PANASONIC	HDC-HS200	7,4V/2640mAh	BDP-PVG260	B 111	VW-VBG260	59321
PANASONIC	HDC-HS300	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	HDC-HS300	7,4V/2640mAh	BDP-PVG260	B 111	VW-VBG260	59321
PANASONIC	HDC-HS700		not available			
PANASONIC	HDC-HS900		not available			
PANASONIC	HDC-SD9	7,4V/2640mAh	BDP-PVG260	B 111	VW-VBG260	59321
PANASONIC	HDC-SD9	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	HDC-SD10	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	HDC-SD10	7,4V/2640mAh	BDP-PVG260	B 111	VW-VBG260	59321
PANASONIC	HDC-SD20	7,4V/2640mAh	BDP-PVG260	B 111	VW-VBG260	59321
PANASONIC	HDC-SD40		not available			
PANASONIC	HDC-SD66		not available			
PANASONIC	HDC-SD80		not available			
PANASONIC	HDC-SD99		not available			
PANASONIC	HDC-SD100	7,4V/2640mAh	BDP-PVG260	B 111	VW-VBG260	59321
PANASONIC	HDC-SD200	7,4V/2640mAh	BDP-PVG260	B 111	VW-VBG260	59321
PANASONIC	HDC-SD300	7,4V/2640mAh	BDP-PVG260	B 111	VW-VBG260	59321
PANASONIC	HDC-SD600		not available			
PANASONIC	HDC-SD707		not available			
PANASONIC	HDC-SD800		not available			
PANASONIC	HDC-SD909		not available			
PANASONIC	HDC-SDT750		not available			
PANASONIC	HDC-SDX1		not available			
PANASONIC	HDC-SX5	7,4V/2640mAh	BDP-PVG260	B 111	VW-VBG260	59321
PANASONIC	HDC-SX5	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	HDC-TM60		not available			
PANASONIC	HDC-TM80		not available			
PANASONIC	HDC-TM350	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	HDC-TM700		not available			
PANASONIC	HDC-TM900		not available			
PANASONIC	HM-TA1		not available			
PANASONIC	NV-DA1B	7,4V/2200mAh	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	NV-DA1B	7,4V/2200mAh	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	NV-DA1B	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	NV-DA1B	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	NV-DS3	7,4V/2200mAh	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	NV-DS3	7,4V/2200mAh	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	NV-DS3	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	NV-DS3	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	NV-DS12B	7,4V/2200mAh	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	NV-DS12B	7,4V/2200mAh	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	NV-DS12B	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	NV-DS12B	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

PANASONIC	NV-DS15	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	NV-DS15	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	NV-DS15	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	NV-DS15	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	NV-DS33	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	NV-DS33	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	NV-DS33	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	NV-DS33	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	NV-DS150B	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	NV-DS150B	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	NV-DS150B	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	NV-DS150B	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	NV-GS10B	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS10B	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS10B	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS10B	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS10B	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS30	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS30	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS30	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS30	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS30	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS33EGS	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS33EGS	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS33EGS	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS33EGS	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS33EGS	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS50AW	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS50AW	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS50AW	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS50AW	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS50AW	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS50K	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS50K	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS50K	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS50K	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS50K	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS50V	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS50V	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS50V	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS50V	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS50V	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS55B	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS55B	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS55B	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS55B	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS55B	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS55EGS	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS55EGS	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS55EGS	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS55EGS	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS55EGS	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS55K	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS55K	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS55K	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

PANASONIC	NV-GS55K	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS55K	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS70K	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS70K	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS70K	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS70K	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS70K	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS75EGS	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS75EGS	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS75EGS	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS75EGS	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS75EGS	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS90	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	NV-GS120B	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS120B	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS120B	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS120B	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS120B	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS120EGS	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS120EGS	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS120EGS	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS120EGS	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS120EGS	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS120K	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS120K	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS120K	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS120K	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS120K	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS150EGS	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS150EGS	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS150EGS	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS150EGS	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS150EGS	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS200B	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS200B	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS200B	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS200B	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS200B	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS200EGS	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS200EGS	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS200EGS	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS200EGS	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS200EGS	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS200K	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS200K	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS200K	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS200K	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS200K	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS250B	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS250B	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS250B	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS250B	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS250B	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS250EGS	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS250EGS	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

PANASONIC	NV-GS250EGS	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS250EGS	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS250EGS	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS400B	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS400B	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS400B	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS400B	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS400B	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS400EGS	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS400EGS	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	NV-GS400EGS	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS400EGS	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	NV-GS400EGS	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS60	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS60	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	NV-GS80	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS80	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	NV-GS90	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS90	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS90	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS90	7,4V/2640mAh	BDP-PVG260	B 111	VW-VBG260	59321
PANASONIC	NV-GS90	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	NV-GS230	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS230	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	NV-GS320	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS320	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	NV-GS330	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS330	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS330	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS330	7,4V/2640mAh	BDP-PVG260	B 111	VW-VBG260	59321
PANASONIC	NV-GS330	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	NV-GS500	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-GS500	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	NV-GS500	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-GS500	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	NV-GS500	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	NV-MX500A	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	NV-MX500A	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	PV-DV52	7,4V/2200mAh	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-DV52	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-DV52	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	PV-DV53	7,4V/2200mAh	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-DV53	7,4V/2200mAh	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	PV-DV53	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-DV53	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	PV-DV73	7,4V/2200mAh	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-DV73	7,4V/2200mAh	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	PV-DV73	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-DV73	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	PV-DV102	7,4V/2200mAh	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-DV102	7,4V/2200mAh	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	PV-DV102	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-DV102	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	PV-DV103	7,4V/2200mAh	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-DV103	7,4V/2200mAh	BDP-PD220	B 68	CGR-D16S	59266

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

PANASONIC	PV-DV103	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-DV103	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	PV-DV202	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-DV202	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	PV-DV202	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-DV202	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	PV-DV203	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-DV203	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	PV-DV203	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-DV203	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	PV-DV402	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-DV402	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	PV-DV402	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-DV402	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	PV-DV602	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-DV602	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	PV-DV602	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-DV602	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	PV-DV702	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-DV702	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	PV-DV702	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-DV702	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	PV-DV852	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-DV852	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	PV-DV852	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-DV852	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	PV-DV952	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-DV952	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	PV-DV952	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC						
PANASONIC	PV-DV952	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	PV-DV953	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-DV953	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	PV-DV953	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-DV953	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	PV-GS2	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-GS2	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	PV-GS2	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-GS2	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	PV-GS9	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-GS9	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	PV-GS9	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-GS9	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	PV-GS12	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-GS12	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	PV-GS12	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-GS12	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	PV-GS14	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-GS14	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	PV-GS14	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-GS14	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	PV-GS15	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-GS15	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	PV-GS15	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-GS15	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

PANASONIC	PV-GS33	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	PV-GS33	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	PV-GS33	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	PV-GS33	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	PV-GS50	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	PV-GS50	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	PV-GS50	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	PV-GS50	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	PV-GS50	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	PV-GS50S	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	PV-GS50S	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	PV-GS50S	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	PV-GS50S	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	PV-GS50S	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	PV-GS55	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	PV-GS55	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	PV-GS55	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	PV-GS55	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	PV-GS55	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	PV-GS70	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	PV-GS70	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	PV-GS70	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	PV-GS70	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	PV-GS70	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	PV-GS75	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	PV-GS75	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	PV-GS75	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	PV-GS75	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	PV-GS75	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	PV-GS75B	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	PV-GS75B	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	PV-GS75B	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	PV-GS75B	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	PV-GS120	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	PV-GS120	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	PV-GS120	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	PV-GS120	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	PV-GS120	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	PV-GS150	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	PV-GS150	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	PV-GS150	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	PV-GS150	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	PV-GS150	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	PV-GS150B	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	PV-GS150B	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	PV-GS150B	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	PV-GS150B	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	PV-GS200	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	PV-GS200	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	PV-GS200	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	PV-GS200	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	PV-GS200	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	PV-GS250	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	PV-GS250	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	PV-GS250	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

PANASONIC	PV-GS250	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	PV-GS250	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	PV-GS400	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	PV-GS400	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	PV-GS400	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	PV-GS400	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	PV-GS400	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	PV-VM202	7,4V/2200mAH	BDP-PD220	B 68	CGR-D220	59266
PANASONIC	PV-VM202	7,4V/2200mAH	BDP-PD220	B 68	CGR-D16S	59266
PANASONIC	PV-VM202	7,4V/3240mAh	BDP-PD320	B 69	CGR-D320	59267
PANASONIC	PV-VM202	7,4V/3240mAh	BDP-PD320	B 69	CGR-D28S	59267
PANASONIC	SDR-H18	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	SDR-H18	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	SDR-H20	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	SDR-H20	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	SDR-H20	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	SDR-H50	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	SDR-H80	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	SDR-H85		not available			
PANASONIC	SDR-H90	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	SDR-H100		not available			
PANASONIC	SDR-H200	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	SDR-H200	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	SDR-H250	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	SDR-H250	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	SDR-H250	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	SDR-H280	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	SDR-H280	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	SDR-H280	7,4V/2640mAh	BDP-PVG260	B 111	VW-VBG260	59321
PANASONIC	SDR-H280	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	SDR-H280	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	SDR-H288GK	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	SDR-H288GK	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	SDR-H60	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	SDR-H40	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	SDR-H85		not available			
PANASONIC	SDR-S7	3,7V/1320mAh	BDP-PVBJ10	B 112	VW-VBJ10	59322
PANASONIC	SDR-S9	3,7V/1320mAh	BDP-PVBJ10	B 112	VW-VBJ10	59322
PANASONIC	SDR-S10	3,7V/1320mAh	BDP-PVBJ10	B 112	VW-VBJ10	59322
PANASONIC	SDR-S15	3,7V/1320mAh	BDP-PVBJ10	B 112	VW-VBJ10	59322
PANASONIC	SDR-S26	3,7V/1320mAh	BDP-PVBJ10	B 112	VW-VBJ10	59322
PANASONIC	SDR-S50		not available			
PANASONIC	SDR-S70		not available			
PANASONIC	SDR-S100	7,4V/760mAh	BDP-PS303/1B	B 129	CGA-S303	59337
PANASONIC	SDR-S100EG-S	7,4V/760mAh	BDP-PS303/1B	B 129	CGA-S303	59337
PANASONIC	SDR-S100E-S	7,4V/760mAh	BDP-PS303/1B	B 129	CGA-S303	59337
PANASONIC	SDR-S150	7,4V/760mAh	BDP-PS303/1B	B 129	CGA-S303	59337
PANASONIC	SDR-S150EB-S	7,4V/760mAh	BDP-PS303/1B	B 129	CGA-S303	59337
PANASONIC	SDR-S150EG-S	7,4V/760mAh	BDP-PS303/1B	B 129	CGA-S303	59337
PANASONIC	SDR-S150DE-S	7,4V/760mAh	BDP-PS303/1B	B 129	CGA-S303	59337
PANASONIC	SDR-S200	7,4V/760mAh	BDP-PS303/1B	B 129	CGA-S303	59337
PANASONIC	SDR-SW20	3,7V/1320mAh	BDP-PVBJ10	B 112	VW-VBJ10	59322
PANASONIC	SDR-SW21	3,7V/1320mAh	BDP-PVBJ10	B 112	VW-VBJ10	59322
PANASONIC	SDR-T50		not available			

PANASONIC	SDR-T70	not available				
PANASONIC	VDR-D50	7,4V/2640mAh	BDP-PVG260	B 111	VW-VBG260	59321
PANASONIC	VDR-D50	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	VDR-D160	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	VDR-D160	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	VDR-D160	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	VDR-D220	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	VDR-D220	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	VDR-D220	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	VDR-D310	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	VDR-D310	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	VDR-D310	7,4V/1320mAh	BDP-DV-PV130EX	B 88	VW-VBG130	59297
PANASONIC	VDR-D400	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	VDR-D400	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	VDR-M30	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	VDR-M30	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	VDR-M30	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	VDR-M30	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	VDR-M30	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	VDR-M50	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	VDR-M50	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	VDR-M50	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	VDR-M50	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	VDR-M50	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	VDR-M50B	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	VDR-M50B	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	VDR-M50B	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	VDR-M50B	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	VDR-M50B	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
PANASONIC	VDR-M50EGS	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
PANASONIC	VDR-M50EGS	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
PANASONIC	VDR-M50EGS	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
PANASONIC	VDR-M50EGS	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
PANASONIC	VDR-M50EGS	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
SAMSUNG	VDR-M70	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
SAMSUNG	VDR-M70	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
SAMSUNG	VDR-M70	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
SAMSUNG	VDR-M70	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
SAMSUNG	VDR-M70	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
SAMSUNG	VDR-M70B	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
SAMSUNG	VDR-M70B	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
SAMSUNG	VDR-M70B	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
SAMSUNG	VDR-M70B	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
SAMSUNG	VDR-M70B	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
SAMSUNG	VDR-M70EGS	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
SAMSUNG	VDR-M70EGS	7,4V/720mAh	BDP-PDU07	B 70	CGA-DU07	59268
SAMSUNG	VDR-M70EGS	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
SAMSUNG	VDR-M70EGS	7,4V/1440mAh	BDP-PDU14	B 71	CGA-DU14	59269
SAMSUNG	VDR-M70EGS	7,4V/2160mAh	BDP-PDU21	B 72	CGA-DU21	59270
SAMSUNG	VDR-M75	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
SAMSUNG	VDR-M75	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
SAMSUNG	VDR-M75E-S	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
SAMSUNG	VDR-M75E-S	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324
SAMSUNG	VDR-M95	7,4V/640mAh	BDP-PDU06	B 113	CGA-DU06	59323
SAMSUNG	VDR-M95	7,4V/1150mAh	BDP-PDU12	B 114	CGA-DU12	59324

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SAMSUNG	SC-D20/21/22	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	SC-D20/21/23	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	SC-D23/24/27	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	SC-D23/24/27	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	SC-D29/31/33	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	SC-D31/33/34	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	SC-D34/39	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	SC-D67	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	SC-D67	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	SC-D70/71/73	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	SC-D70/73	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	SC-D75/77	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	SC-D75/77	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	SC-D80/86/87	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	SC-D80/86/87	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	SC-D93/99	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	SC-D93/99	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	SC-D180	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	SC-D180	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	SC-D263	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SC-D323/25/27	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	SC-D323/25/27	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	SC-D351	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	SC-D351	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SC-D353	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	SC-D353	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SC-D362	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SC-D363	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SC-D364	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SC-D365	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SC-D366	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SC-D453	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	SC-D453	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SC-D455	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	SC-D455	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SC-D530/530T	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	SC-D530/530T	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	SC-D590/590T	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	SC-D590/590T	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	SC-D963	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SC-D965	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SC-DC163	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SC-DC164	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SC-DC165	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SC-DC563	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SC-DC564	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SC-DC565	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	SMX-F50		not available			
SAMSUNG	SMX-F53		not available			
SAMSUNG	SMX-F70		not available			
SAMSUNG	VM-A600/630	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VM-A637H	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VM-A650/660	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VM-A670	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VM-A930/990	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SAMSUNG	VM-B1300/T	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VM-B1700/T	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VM-B1900/R/T	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VM-B3710	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VM-B3770/75	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VM-B710/30/70	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VM-B97HS	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VM-B990/H	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VM-B995P	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VM-C630/70/90	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VM-C730/90	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VM-C860/70/90	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VM-C2000	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VM-DC160	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VM-DC560	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VM-DC560K	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D7L	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	VP-D7L	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	VP-D10/i/11/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D15/i/19	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D20/i/21/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D20/i/21/i	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	VP-D23/i/24/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D23/i/24/i	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	VP-D26/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D26/i	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	VP-D30/i/31/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D33/i/34/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D39/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D39/i	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	VP-D55	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D55	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	VP-D60/63/65	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D65	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	VP-D70/i/73/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D75/i/76/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D77/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D80/i/81/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D82/i/83/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D85/87/D	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D87Di/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D93/i/97/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D99/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D101/03/05	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	VP-D107	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	VP-D130/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D190/190i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D190MS/Msi	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D230	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	VP-D250	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	VP-D270	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	VP-D301/03/05	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	VP-D307	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	VP-D323/25/27	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	VP-D340/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SAMSUNG	VP-D351	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D351	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D351I	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D351I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D352	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D352	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D352I	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D352I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D353	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D353	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D353I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D354	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D354	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D354I	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D354I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D355	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D355	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D355I	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D355I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D361	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D361	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D361I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D361W	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D361WI	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D362	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D362	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D362I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D363	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D363I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D364W	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D364WI	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D365WI	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D371	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D371W	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D380/i	7,4V/1400mAh	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D381	7,4V/800mAH	BDP-SBP80W	B 147	IA-S80W	59355
SAMSUNG	VP-D391	7,4V/800mAH	BDP-SBP80W	B 147	IA-S80W	59355
SAMSUNG	VP-D451	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D451	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D453	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D453	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D453I	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D453I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D454	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D454	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D455	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D455	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D455I	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	Vp-D455I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D461B	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D461I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D463B	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D463I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D467I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D530	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SAMSUNG	VP-D530/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D530R/T	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D530Ti	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D563	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D590/i	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D590	7,4V/2800mAh	BDP-SLB220	B 133	SBL-220	59341
SAMSUNG	VP-D590Ri	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D590T/Ti	7,4V/1400mAH	BDP-SLB110	B 132	SBL-110	59340
SAMSUNG	VP-D651	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D651	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D653	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D653	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D655	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-D655	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D963	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D963I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D964I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-964W	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D965I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D965W	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-D965WI	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC161	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-DC161	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC161I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC161W	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-DC161W	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC161WB	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC161WBI	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC161WI	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC163	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-DC163	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC163I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC165W	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-DC165W	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC165WB	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC165WBI	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC165Wi	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC171	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-DC171	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC171W	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-DC171W	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC173	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC175WB	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC563	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-DC563I	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC565WBI	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC565WI	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC575WB	7,4V/800mAH	BDP-SBLSM80	B 73	SB-LSM80	59271
SAMSUNG	VP-DC575WB	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DC575WB/xEU	7,4V/1800mAh	BDP-SLSM160	B 134	SB-LSM160	59342
SAMSUNG	VP-DX100	7,4V/800mAh	BDP-SBP80W	B 147	IA-BP80W	59355
SAMSUNG	HMX-E10		not available			
SAMSUNG	VP-HMX20C	3,7V/680mAh	BDP-SABP85ST	B 116	IA-BP85ST	59326
SAMSUNG	VP-HMX-H100	3,7V/680mAh	BDP-SABP85ST	B 116	IA-BP85ST	59326
SAMSUNG	VP-HMX-H104	3,7V/680mAh	BDP-SABP85ST	B 116	IA-BP85ST	59326

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SAMSUNG	VP-HMX-H105	3,7V/680mAh	BDP-SABP85ST	B 116	IA-BP85ST	59326
SAMSUNG	VP-HMX-H106	3,7V/680mAh	BDP-SABP85ST	B 116	IA-BP85ST	59326
SAMSUNG	VP-HMX-H200		not available			
SAMSUNG	VP-HMX-H204		not available			
SAMSUNG	VP-HMX-H300		not available			
SAMSUNG	VP-HMX-H303		not available			
SAMSUNG	VP-HMX-H304		not available			
SAMSUNG	VP-HMX-Q10		not available			
SAMSUNG	VP-HMX-R10	7,4V/800mAH	BDP-SBP80W	B 147	IA-S80W	59355
SAMSUNG	VP-HMX-S10		not available			
SANYO	VP-HMX-S15		not available			
SANYO	HMX-T10		not available			
SANYO	HMX-U20		not available			
SANYO	HMX-W200		not available			
SANYO	VP-MX20	3,7V/680mAh	BDP-SABP85ST	B 116	IA-BP85ST	59326
SANYO	VP-SMX-C10		not available			
SANYO	VP-SMX-C20		not available			
SANYO	VP-SMX-F30	3,7V/680mAh	BDP-SABP85ST	B 116	IA-BP85ST	59326
SANYO	VP-SMX-F34	3,7V/680mAh	BDP-SABP85ST	B 116	IA-BP85ST	59326
SANYO	VP-SMX-F33	3,7V/680mAh	BDP-SABP85ST	B 116	IA-BP85ST	59326
SANYO	VP-SMX-F40		not available			
SANYO	VP-SMX-F44		not available			
SANYO	VP-SMX-K40		not available			
SANYO	CA8	3,7V/720mAh	BDP-DBL20	B 51	DB-L20	59249
SANYO	CA9	3,7V/720mAh	BDP-DBL20	B 51	DB-L20	59249
SANYO	CG9	3,7V/720mAh	BDP-DBL20	B 51	DB-L20	59249
SANYO	CG10	3,7V/740mAh	BDP-SDBL80	B 153	DB-L80	59361
SANYO	CG20		not available			
SANYO	DMX-HD1010	3,7V/1700mAh	BDP-DB-L50	B 137	DB-L50	59345
SANYO	HD-700	3,7V/1200mAh	BDP-DBL40	B 136	DB-L40	59344
SANYO	VPC-CA100					
SANYO	VPC-CS1	3,7V/740mAh	BDP-SDBL80	B 153	DB-L80	59361
SANYO	VPC-CG20	3,7V/740mAh	BDP-SDBL80	B 153	DB-L80	59361
SANYO	VPC-CG21		not available			
SANYO	VPC-CG100	3,7V/740mAh	BDP-SDBL80	B 153	DB-L80	59361
SANYO	VPC-GH1	3,7V/740mAh	BDP-SDBL80	B 153	DB-L80	59361
SANYO	VPC-GH3		not available			
SANYO	VPC-HD1000	3,7V/1700mAh	BDP-DB-L50	B 137	DB-L50	59345
SANYO	VPC-HD1010	3,7V/1700mAh	BDP-DB-L50	B 137	DB-L50	59345
SANYO	VPC-HD2000	3,7V/1700mAh	BDP-DBL50	B 137	DB-L50	59345
SANYO	VPC-HD2000A	3,7V/1700mAh	BDP-DB-L50	B 137	DB-L50	59345
SANYO	VPC-FH1	3,7V/1700mAh	BDP-DB-L50	B 137	DB-L50	59345
SANYO	VPC-PD1		not available			
SANYO	VPC-SH1		not available			
SANYO	TH1	3,7V/1700mAh	BDP-DB-L50	B 137	DB-L50	59345
SANYO	WH1	3,7V/1700mAh	BDP-DB-L50	B 137	DB-L50	59345
SONY	CCD-SC5	7,4V/2200mAh	BDP-SF550	B 80	NP-F550	59278
SONY	CCD-SC5	7,4V/ 4800mAh	BDP-SF750	B 81	NP-F750	59279
SONY	CCD-SC5	7,4V/7800mAh	BDP-SF960	B 82	NP-F960	59280
SONY	CCD-TR3	7,4V/2200mAh	BDP-SF550	B 80	NP-F550	59278
SONY	CCD-TR3	7,4V/ 4800mAh	BDP-SF750	B 81	NP-F750	59279
SONY	CCD-TR3	7,4V/7800mAh	BDP-SF960	B 82	NP-F960	59280
SONY	CCD-TRV90	7,4V/ 4800mAh	BDP-SF750	B 81	NP-F750	59279
SONY	CCD-TRV108	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	CCD-TRV108	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SONY	CCD-TRV108	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	CCD-TRV116	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	CCD-TRV116	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	CCD-TRV116	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	CCD-TRV118	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	CCD-TRV118	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	CCD-TRV118	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	CCD-TRV128	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	CCD-TRV128	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	CCD-TRV128	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	CCD-TRV138	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	CCD-TRV138	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	CCD-TRV138	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	CCD-TRV308	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	CCD-TRV308	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	CCD-TRV308	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	CCD-TRV318	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	CCD-TRV318	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	CCD-TRV318	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	CCD-TRV328	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	CCD-TRV328	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	CCD-TRV328	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	CCD-TRV338	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	CCD-TRV338	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	CCD-TRV338	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	CCD-TVR608	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	CCD-TVR608	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	CCD-TRV608	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV900	7,4V/7800mAh	BDP-SF960	B 82	NP-F960	59280
SONY	DCR-DVD92	7,4V/700mAh	BDP-SFP50	B 76	NP-FP50	59274
SONY	DCR-DVD92	7,4V/1360mAh	BDP-SFP70	B 77	NP-FP70	59275
SONY	DCR-DVD92	7,4V/2460mAh	BDP-SFP90	B 78	NP-FP90	59276
SONY	DCR-DVD92	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD92	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD92E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD92E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD100	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-DVD100	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-DVD100	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-DVD101	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-DVD101	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-DVD101	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-DVD103	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD103	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD105E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD105E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD106E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD106E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD109E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD109E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD110	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-DVD110	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-DVD110	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-DVD110	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-DVD110	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SONY	DCR-DVD110E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-DVD110E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-DVD110E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-DVD110E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-DVD110E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-DVD110E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD110E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD115E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-DVD115E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-DVD115E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-DVD115E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-DVD115E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-DVD115E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD115E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD150E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-DVD150E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-DVD150E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-DVD150E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD150E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD200	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-DVD200	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-DVD200	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-DVD201	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-DVD201	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-DVD201	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-DVD202	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD202	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD202E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD202E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD203	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD203	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD203E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD203E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD205E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD205E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD300	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-DVD300	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-DVD300	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-DVD301	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-DVD301	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-DVD301	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-DVD304E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD304E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD305E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD305E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD306E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD306E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD308	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD308	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD310	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-DVD310	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-DVD310	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-DVD310	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-DVD310	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-DVD310E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SONY	DCR-DVD310E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-DVD310E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-DVD310E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-DVD310E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-DVD310E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD310E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD403	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD403	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD403E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD403E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD404E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD404E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD404E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD404E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD405	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD405	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD405E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD405E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD406E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD406E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD406E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD410	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-DVD410	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-DVD410	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-DVD410	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-DVD410	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-DVD410E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-DVD410E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-DVD410E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-DVD410E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-DVD410E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-DVD410E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD410E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD450E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-DVD450E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-DVD450E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-DVD450E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD450E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD505	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD505	6,8V/650mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD505E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD505E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD506E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD506E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD508	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD508	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD510	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-DVD510	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-DVD510	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-DVD510	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-DVD510	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-DVD510E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-DVD510E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-DVD510E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-DVD510E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-DVD510E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-DVD510E	6,8V/650mAh	BDP-SNPFV50	B 180		59389

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SONY	DCR-DVD510E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD602	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD602	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD653	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD653	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD703	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD703	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD803	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD803	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD803F	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD803F	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD805	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD805	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-DVD905	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-DVD905	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC16E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC16E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC16F	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC16F	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC17	7,4V/700mAh	BDP-SFP50	B 76	NP-FP50	59274
SONY	DCR-HC17	7,4V/1360mAh	BDP-SFP70	B 77	NP-FP70	59275
SONY	DCR-HC17	7,4V/2460mAh	BDP-SFP90	B 78	NP-FP90	59276
SONY	DCR-HC17	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC17	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC17E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC17E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC18	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC18	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC18E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC18E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC19	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC19	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC19E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC19E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC20	7,4V/700mAh	BDP-SFP50	B 76	NP-FP50	59274
SONY	DCR-HC20	7,4V/1360mAh	BDP-SFP70	B 77	NP-FP70	59275
SONY	DCR-HC20	7,4V/2460mAh	BDP-SFP90	B 78	NP-FP90	59276
SONY	DCR-HC20	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC20	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC20E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC20E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC21	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC21	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC22	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC22	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC22E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC22E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC23E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC23E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC24E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC24E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC26E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC26E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC27E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC27E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SONY	DCR-HC30	7,4V/700mAh	BDP-SFP50	B 76	NP-FP50	59274
SONY	DCR-HC30	7,4V/1360mAh	BDP-SFP70	B 77	NP-FP70	59275
SONY	DCR-HC30	7,4V/2460mAh	BDP-SFP90	B 78	NP-FP90	59276
SONY	DCR-HC30	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC30	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC30E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC30E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC32	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC32	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC32E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC32E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC33	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC33	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC35E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC35E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC35E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC36E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC36E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC37E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC37E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC39E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC39E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC40	7,4V/700mAh	BDP-SFP50	B 76	NP-FP50	59274
SONY	DCR-HC40	7,4V/1360mAh	BDP-SFP70	B 77	NP-FP70	59275
SONY	DCR-HC40	7,4V/2460mAh	BDP-SFP90	B 78	NP-FP90	59276
SONY	DCR-HC40	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC40	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC40E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC40E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC41	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC41	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC42	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC42	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC42E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC42E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC43	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC43	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC44E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC44E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC45E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC45E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC46	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC46	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC46E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC46E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC47E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC47E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC48	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC48	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC51	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-HC51	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-HC51	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-HC51	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-HC51	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-HC51E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SONY	DCR-HC51E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-HC51E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-HC51E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-HC51E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-HC51E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC51E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC53	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-HC53	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-HC53	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-HC53	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-HC53	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-HC53E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-HC53E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-HC53E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-HC53E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-HC53E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-HC53E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC53E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC62	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-HC62	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-HC62	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-HC62	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-HC62	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-HC62E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-HC62E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-HC62E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-HC62E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-HC62E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-HC62E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC62E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC65	7,4V/700mAh	BDP-SFP50	B 76	NP-FP50	59274
SONY	DCR-HC65	7,4V/1360mAh	BDP-SFP70	B 77	NP-FP70	59275
SONY	DCR-HC65	7,4V/2460mAh	BDP-SFP90	B 78	NP-FP90	59276
SONY	DCR-HC65	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC65	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC65F	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC65F	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC85	7,4V/2460mAh	BDP-SFP90	B 78	NP-FP90	59276
SONY	DCR-HC85	7,4V/1360mAh	BDP-SFP70	B 77	NP-FP70	59275
SONY	DCR-HC85	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC85	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC85E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC85E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC88	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-HC88	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-HC94E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC94E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC96	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC96	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-HC96E	7,4V/700mAh	BDP-SFP50	B 76	NP-FP50	59274
SONY	DCR-HC96E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-HC96E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-PC9	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-PC9	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-PC9E	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SONY	DCR-PC9E	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-PC100	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-PC100	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-PC100	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-PC101	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-PC101	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-PC101	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-PC105	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-PC105	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-PC105	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-PC105R	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-PC110	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-PC110	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-PC110	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-PC115	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-PC115	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-PC115E	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-PC116	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-PC120	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-PC120BT	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-PC120BT	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-PC120BT	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-PC330	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-PC330	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-SR15E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR15E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR30E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR30E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR32E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR32E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR33E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR33E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR35	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-SR35	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-SR35	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-SR35	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-SR35	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-SR35E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-SR35E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-SR35E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-SR35E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-SR35E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-SR35E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR35E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR36	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-SR36	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-SR36	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-SR36	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-SR36	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-SR36E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-SR36E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-SR36E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-SR36E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-SR36E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-SR36E	6,8V/650mAh	BDP-SNPFV50	B 180		59389

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SONY	DCR-SR36E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR37E	7,4V/800mAh	BDP-SFH50	B 138	FH-Infochip	59346
SONY	DCR-SR37E	7,4V/1300mAh	BDP-SFH70	B 139	FH-Infochip	59347
SONY	DCR-SR37E	7,4V/3000mAh	BDP-SFH100	B 140	FH-Infochip	59348
SONY	DCR-SR37E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR37E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR38E	7,4V/800mAh	BDP-SFH50	B 138	FH-Infochip	59346
SONY	DCR-SR38E	7,4V/1300mAh	BDP-SFH70	B 139	FH-Infochip	59347
SONY	DCR-SR38E	7,4V/3000mAh	BDP-SFH100	B 140	FH-Infochip	59348
SONY	DCR-SR38E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR38E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR50E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR50E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR52E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR52E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR55	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-SR55	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-SR55	7,4V/800mAh	BDP-SFH50	B 138	FH-Infochip	59346
SONY	DCR-SR55	7,4V/1300mAh	BDP-SFH70	B 139	FH-Infochip	59347
SONY	DCR-SR55	7,4V/3000mAh	BDP-SFH100	B 140	FH-Infochip	59348
SONY	DCR-SR55E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-SR55E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-SR55E	7,4V/800mAh	BDP-SFH50	B 138	FH-Infochip	59346
SONY	DCR-SR55E	7,4V/1300mAh	BDP-SFH70	B 139	FH-Infochip	59347
SONY	DCR-SR55E	7,4V/3000mAh	BDP-SFH100	B 140	FH-Infochip	59348
SONY	DCR-SR55E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR55E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR57E	7,4V/800mAh	BDP-SFH50	B 138	FH-Infochip	59346
SONY	DCR-SR57E	7,4V/1300mAh	BDP-SFH70	B 139	FH-Infochip	59347
SONY	DCR-SR57E	7,4V/3000mAh	BDP-SFH100	B 140	FH-Infochip	59348
SONY	DCR-SR57E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR57E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR58E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR58E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR60	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR60	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR62	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR62	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR70E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR70E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR72E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR72E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR75	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-SR75	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-SR75	7,4V/800mAh	BDP-SFH50	B 138	FH-Infochip	59346
SONY	DCR-SR75	7,4V/1300mAh	BDP-SFH70	B 139	FH-Infochip	59347
SONY	DCR-SR75	7,4V/3000mAh	BDP-SFH100	B 140	FH-Infochip	59348
SONY	DCR-SR75E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-SR75E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-SR75E	7,4V/800mAh	BDP-SFH50	B 138	FH-Infochip	59346
SONY	DCR-SR75E	7,4V/1300mAh	BDP-SFH70	B 139	FH-Infochip	59347
SONY	DCR-SR75E	7,4V/3000mAh	BDP-SFH100	B 140	FH-Infochip	59348
SONY	DCR-SR75E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR75E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR77E	7,4V/800mAh	BDP-SFH50	B 138	FH-Infochip	59346

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SONY	DCR-SR77E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-SR77E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR77E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR77E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-SR78E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR78E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR90E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR90E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR100	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR100	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR190E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR190E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR210	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-SR210	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-SR210	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-SR210	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-SR210	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-SR210E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-SR210E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-SR210E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-SR210E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-SR210E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-SR210E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR210E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR290	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	DCR-SR290	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	DCR-SR290	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-SR290	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-SR290	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-SR290E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR290E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SR300	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SR300	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SX15E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SX15E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SX21E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SX30E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-SX30E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-SX30E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-SX30E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SX30E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SX30ES	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-SX30ES	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-SX30ES	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-SX31E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	DCR-SX31E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-SX31E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-SX31E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SX31E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DC-XS33		not available			
SONY	DCR-SX34E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SX34E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SX45E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SX45E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SX50E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SONY	DCR-SX50E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	DCR-SX50E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	DCR-SX50E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SX50E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SX53E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SX53E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SX65E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SX65E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SX73E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SX73E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-SX85E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	DCR-SX85E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	DCR-TRV6	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV6	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV6	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV8	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV8	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV8	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV10	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV10	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV10	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV11	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV11	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV11	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV17	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV17	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV17K	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV18	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV18	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV18K	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV19	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV19	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV19	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV20	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV20	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV20	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV22	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV22	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV22	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV25	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV25	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV27	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV30	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV30	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV30	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV33	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV33	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV33	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV38	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV38	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV38	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV39	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV39	7,4V/1400mAh	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV39	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV50	7,4V/1400mAh	BDP-SQM50	B 74	NP-QM50	59272

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SONY	DCR-TRV50	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV50	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV70	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV70	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV70	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV80	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV80	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV80	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TVR140	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TVR140	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV140	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV230	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV230	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV230	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV240	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV240	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV240	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV250	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV250	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV250	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV250	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV260	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV260	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV260	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV280	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV280	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV280	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV330	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV330	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV340	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV340	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV340	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV350	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV350	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV350	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV360	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV360	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV360	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV460	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV460	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV460	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV480	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV480	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV480	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV530	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV530	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV530	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV730	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV730	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV730	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV740	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV740	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV740	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV830	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV830	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SONY	DCR-TRV830	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV840	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV840	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV840	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-TRV950	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DCR-TRV950	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DCR-TRV950	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	DCR-VX700	7,4V/ 4800mAh	BDP-SF750	B 81	NP-F750	59279
SONY	DCR-VX1000E	7,4V/ 4800mAh	BDP-SF750	B 81	NP-F750	59279
SONY	DCR-VX2000	7,4V/7800mAh	BDP-SF960	B 82	NP-F960	59280
SONY	DCR-VX2100	7,4V/2200mAh	BDP-SF550	B 80	NP-F550	59278
SONY	DCR-VX2100	7,4V/ 4800mAh	BDP-SF750	B 81	NP-F750	59279
SONY	DCR-VX2100	7,4V/7800mAh	BDP-SF960	B 82	NP-F960	59280
SONY	DCR-VX2100E	7,4V/2200mAh	BDP-SF550	B 80	NP-F550	59278
SONY	DCR-VX2100E	7,4V/ 4800mAh	BDP-SF750	B 81	NP-F750	59279
SONY	DCR-VX2100E	7,4V/7800mAh	BDP-SF960	B 82	NP-F960	59280
SONY	DSC-S30	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DSC-S30	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DSC-S50	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DSC-S50	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DSC-S70	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DSC-S70	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DSC-S75	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DSC-S75	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DSC-S85	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DSC-S85	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DSC-F707	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DSC-F707	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DSC-F717	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DSC-F717	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DSC-F828	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DSC-F828	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DSLR-A100	7,4V/1620mAh	BDP-NPFM55H	B 52	NP-FM55H	59250
SONY	DSLR-A100/B	7,4V/1620mAh	BDP-NPFM55H	B 52	NP-FM55H	59250
SONY	DSLR-A100K	7,4V/1620mAh	BDP-NPFM55H	B 52	NP-FM55H	59250
SONY	DSLR-A100K/B	7,4V/1620mAh	BDP-NPFM55H	B 52	NP-FM55H	59250
SONY	DSLR-A100W/B	7,4V/1620mAh	BDP-NPFM55H	B 52	NP-FM55H	59250
SONY	DSR-PDX10	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	DSR-PDX10	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	DSR-PDX10	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	GV-A700	7,4V/2200mAh	BDP-SF550	B 80	NP-F550	59278
SONY	GV-A700	7,4V/ 4800mAh	BDP-SF750	B 81	NP-F750	59279
SONY	GV-A700	7,4V/7800mAh	BDP-SF960	B 82	NP-F960	59280
SONY	GV-D800	7,4V/2200mAh	BDP-SF550	B 80	NP-F550	59278
SONY	GV-D800	7,4V/ 4800mAh	BDP-SF750	B 81	NP-F750	59279
SONY	GV-D800	7,4V/7800mAh	BDP-SF960	B 82	NP-F960	59280
SONY	GV-D900	7,4V/ 4800mAh	BDP-SF750	B 81	NP-F750	59279
SONY	GV-D900	7,4V/7800mAh	BDP-SF960	B 82	NP-F960	59280
SONY	GV-D1000	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	GV-D1000	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	GV-D1000	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	HDR-CX6EK	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-CX6EK	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX6EK	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX11E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SONY	HDR-CX11E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-CX11E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-CX11E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-CX11E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX11E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX105E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-CX105E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX105E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX106E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-CX106E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX106E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX115E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX115E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX130E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX130E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX150E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX150E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX155E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX155E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX160E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX160E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX170	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX170	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX305E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX305E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX350VE	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX350VE	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX360VE	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX360VE	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX370	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX370	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX370V	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX370V	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX505VE	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-CX505VE	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-CX505VE	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-CX505VE	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX505VE	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX520VE	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-CX520VE	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-CX520VE	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-CX520VE	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX520VE	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX550	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX550	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX550V	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX550V	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX550VE	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX550VE	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX560VE	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX560VE	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-CX690E		not available			
SONY	HDR-CX700VE	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-CX700VE	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-FX1	7,4V/2200mAh	BDP-SF550	B 80	NP-F550	59278

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SONY	HDR-FX1	7,4V/ 480mAh	BDP-SF750	B 81	NP-F750	59279
SONY	HDR-FX1	7,4V/780mAh	BDP-SF960	B 82	NP-F960	59280
SONY	HDR-FX7E	7,4V/2200mAh	BDP-SF550	B 80	NP-F550	59278
SONY	HDR-FX7E	7,4V/ 480mAh	BDP-SF750	B 81	NP-F750	59279
SONY	HDR-FX1000E	7,4V/2200mAh	BDP-SF550	B 80	NP-F550	59278
SONY	HDR-FX1000E	7,4V/ 480mAh	BDP-SF750	B 81	NP-F750	59279
SONY	HDR-HC3	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-HC3	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-HC3E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-HC3E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-HC5E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-HC5E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-HC5E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-HC5E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-HC5E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-HC5E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-HC7	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-HC7	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-HC7E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-HC7E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-HC7E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-HC7E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-HC7E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-HC7E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-HC9	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	HDR-HC9	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-HC9	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-HC9	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-HC9	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-HC9E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	HDR-HC9E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-HC9E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-HC9E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-HC9E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-HC9E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-HC9E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-PJ10E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-PJ10E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-PJ30VE	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-PJ30VE	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-PJ50VE	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-PJ50VE	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-SR5E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-SR5E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-SR5E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-SR5E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-SR5E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-SR5E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-SR7E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-SR7E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-SR7E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-SR7E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-SR7E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-SR7E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-SR8E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SONY	HDR-SR10E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	HDR-SR10E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-SR10E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-SR10E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-SR10E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-SR10E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-SR10E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-SR11E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	HDR-SR11E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-SR11E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-SR11E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-SR11E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-SR11E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-SR11E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-SR12E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	HDR-SR12E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-SR12E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-SR12E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-SR12E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-SR12E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-SR12E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-TD10E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-TD10E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-TG1	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-TG1	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-TG3	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	HDR-TG3	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-TG3	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-TG3	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-TG3	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-TG3E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	HDR-TG3E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-TG3E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-TG3E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-TG3E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-TG5	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-TG5	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-TG5V	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-TG5V	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-TG7VE	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-TG7VE	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-TG7VE	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-UX3E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-UX3E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-UX3E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-UX3E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-UX3E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-UX3E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-UX5	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-UX5	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-UX7	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-UX7	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-UX7E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-UX7E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-UX7E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SONY	HDR-UX7E	7,4V/300mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-UX7E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-UX7E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-UX9	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	HDR-UX9	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-UX9	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-UX9	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-UX9	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-UX9E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	HDR-UX9E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-UX9E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-UX9E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-UX9E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-UX9E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-UX9E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-UX19	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	HDR-UX19	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-UX19	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-UX19	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-UX19	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-UX19E	7,4V/850mAh	BDP-SFH50	B 131	FH-SERIE	59339
SONY	HDR-UX19E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-UX19E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-UX19E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-UX19E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-UX19E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-UX19E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-5R8E	7,4V/1200mAh	BDP-SFH70	B 79	FH-SERIE	59277
SONY	HDR-5R8E	7,4V/800mAh	BDP-SFHN50	B 138	FH-Infochip	59346
SONY	HDR-5R8E	7,4V/1300mAh	BDP-SFHN70	B 139	FH-Infochip	59347
SONY	HDR-5R8E	7,4V/3000mAh	BDP-SFHN100	B 140	FH-Infochip	59348
SONY	HDR-XR105E	7,1V/1800mAh	BDP-SFHN60	B 148	NP-FH60	59356
SONY	HDR-XR106E	7,1V/1800mAh	BDP-SFHN60	B 148	NP-FH60	59356
SONY	HDR-XR106E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-XR106E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-XR150	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-XR150	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-XR155E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-XR155E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-XR160E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-XR160E	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-XR200VE	7,1V/1800mAh	BDP-SFHN60	B 148	NP-FH60	59356
SONY	HDR-XR200VE	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-XR200VE	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-XR350	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-XR350	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-XR350VE	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-XR350VE	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-XR500VE	7,1V/1800mAh	BDP-SFHN60	B 148	NP-FH60	59356
SONY	HDR-XR500VE	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-XR500VE	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-XR520VE	7,1V/1800mAh	BDP-SFHN60	B 148	NP-FH60	59356
SONY	HDR-XR520VE	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-XR520VE	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-XR550	6,8V/650mAh	BDP-SNPFV50	B 180		59389

BATTERY - REFERENCE - LIST 25.11.2011
YHTEENSOPIVUUSLISTA AKUT DIGIKAMEROILLE



www.ed-mark.fi

SONY	HDR-XR550	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HDR-XR550VE	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	HDR-XR550VE	6,8V/2800mAh	BDP-SNPFV100	B 181		59390
SONY	HVL-IRM	7,4V/3240mAh	BDP-SQM71	B 75	NP-QM71	59273
SONY	HVR-Z1U	7,4V/2200mAh	BDP-SF550	B 80	NP-F550	59278
SONY	HVR-Z1U	7,4V/ 4800mAh	BDP-SF750	B 81	NP-F750	59279
SONY	HVR-Z1U	7,4V/7800mAh	BDP-SF960	B 82	NP-F960	59280
SONY	MHS-CM5		not available			
SONY	MHS-PM5		not available			
SONY	MHS-PM5K		not available			
SONY	MHS-TS20K		not available			
SONY	MVC-CD200	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	MVC-CD200	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	MVC-CD250	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	MVC-CD250	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	MVC-CD300	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	MVC-CD300	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	MVC-CD350	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	MVC-CD350	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	MVC-CD400	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	MVC-CD400	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	MVC-CD500	7,4V/1400mAH	BDP-SQM50	B 74	NP-QM50	59272
SONY	MVC-CD500	7,4V/1400mAH	BDP-SQM51	B 74	NP-QM51	59272
SONY	NEX-VG10E		not available			
SONY	NEX-VG20E	6,8V/650mAh	BDP-SNPFV50	B 180		59389
SONY	Q002-HDR1	7,4V/2200mAh	BDP-SF550	B 80	NP-F550	59278
SONY	Q002-HDR1	7,4V/ 4800mAh	BDP-SF750	B 81	NP-F750	59279
SONY	Q002-HDR1	7,4V/7800mAh	BDP-SF960	B 82	NP-F960	59280